AKAI

COLOUR TELEVISION

CT-2135

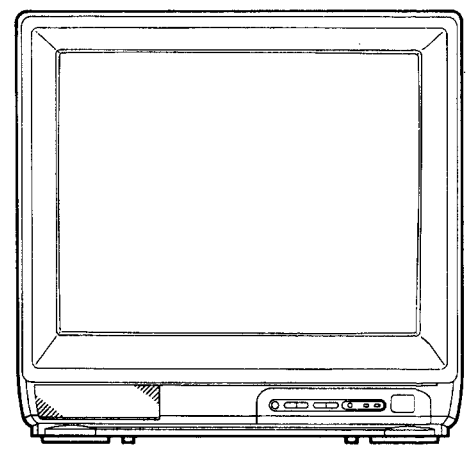

SPECIFICATIONS

Input Power Rating:	95 watts, AC 220 volts, 50 Hz
Aerial Input Impedance:	75 ohm unbalanced type for VHF and UHF
Receiving Channels:	PAL B/G Standard, SECAM B/G Standard: VHF ..... channels 2 to 4, 5 to 12 and S3 to S20 UHF ..... channels 21 to 69
Intermediate Frequencies:	Picture I-F carrier frequency ..... 38.9 MHz Sound I-F carrier frequency ..... 33.4 MHz
Picture Tube:	21 inches, A51EBV12X01, 510 mm (measured on diagonal of viewable picture area), 90° deflection
Sound Output:	3.0 watts (at 10% harmonic distortion), Max. 4.5 watts
Speaker:	70 mm x 60 mm oval
Aux. Terminals:	Headphone Jack, 21 pin socket, S-VIDEO/AUDIO socket, A/V INPUT socket
Dimensions:	Height ..... 482 mm Width ..... 511 mm Depth ..... 485 mm
Weight:	20.5 kg

Specifications are subject to change without notice.

Printed in Japan May, 1990 (So)

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. The E.H.T. must be checked every time the receiver is serviced to ensure that the C.R.T. does not emit X-ray radiation as result of excessive E.H.T. voltage. The nominal E.H.T. for this receiver is 27.5 kV at zero beam current (minimum brightness) operating at 220V a.c. The maximum E.H.T. voltage permissible in any operating circumstances must not exceed 29.0 kV. When checking the E.H.T., use the 'High Voltage Check' procedure in this manual using an accurate E.H.T. voltmeter.
2. The only source of X-RAY radiation in this receiver is the C.R.T. To prevent X-ray radiation, the replacement C.R.T. must be identical to the original fitted as specified in the Parts List.
3. Some components used in this receiver have safety related characteristics preventing the C.R.T. from emitting X-ray radiation.
   For continued safety, replacement component should only be made after referring the Product Safety Notice below.

SAFETY PRECAUTION

1. This receiver has a nominal working E.H.T. voltage of 25.0 kV. Extreme caution should be exercised when working on the receiver with the back removed.
   Do not attempt to service this receiver if you are not conversant with the precautions and procedures for working on high voltage equipment.
   When handling or working on the C.R.T., always discharge the anode to the receiver chassis before removing the anode cap
   The C.R.T., if broken, will violently expel glass fragments. Use shatter proof goggles and take extreme care while handling.
   Do not hold the C.R.T. by the neck as this is a very dangerous practice.
2. It is essential that to maintain the safety of the customer all cable forms be replaced exactly as supplied from factory.
3. A small part of the chassis used in this receiver is, when operating, at approximately half mains potential at all times. It is therefore essential in the interest of safety that when serving or connecting any test equipment the receiver should be supplied via a suitable isolating transformer of adequate rating.
4. Replace blown fuses within the receiver with the fuse specified in the parts list.
5. When replacing wires or components to terminals or tags, wind the leads around the terminal before soldering. When replacing safety components identified by the international hazard symbols on the circuit diagram and parts list, it must be a Toshiba approved type and must be mounted as the original.
6. Keep wires away from high temperature components.

PRODUCT SAFETY NOTICE

Many electrical and mechanical components in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the X-ray radiation protection afforded by them cannot necessarily be obtained by using replacements rated at higher voltages or wattage, etc.Components which have these special safety characteristics in this manual and its supplements are identified by the international hazard symbols on the schematic diagram and parts list. Before replacing any of these components read the parts list in this manual carefully. Substitute replacement components which do not have the same safety characteristics as specified in the parts list may create X-ray radiation.

FRONT CONTROLS AND REAR VIEWS

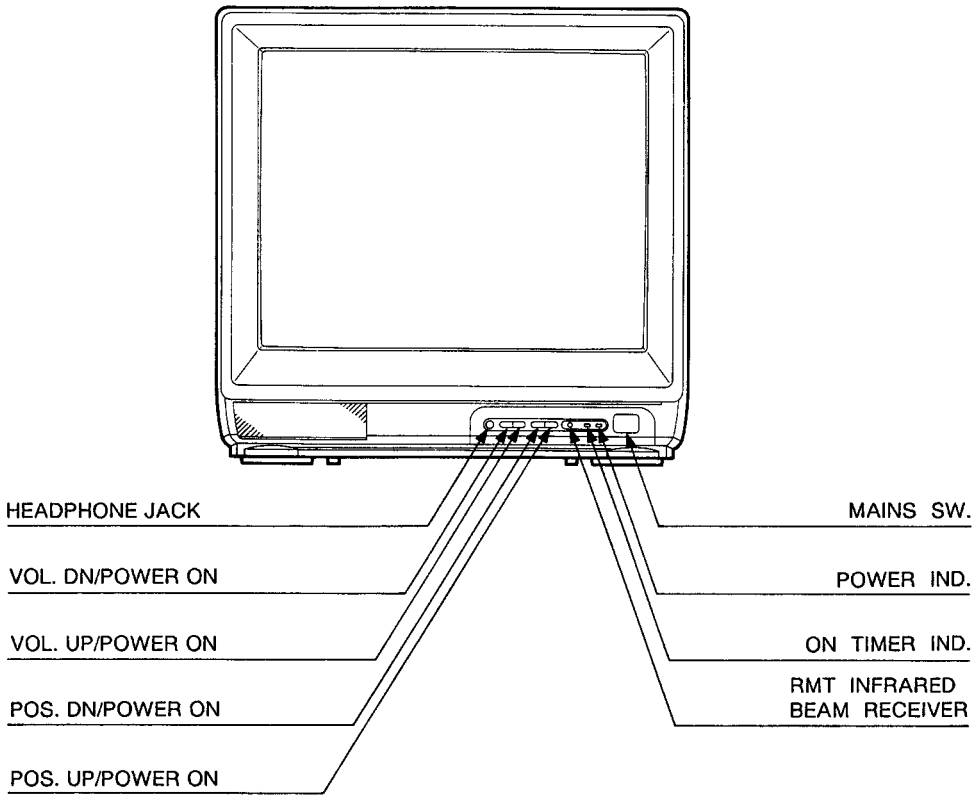

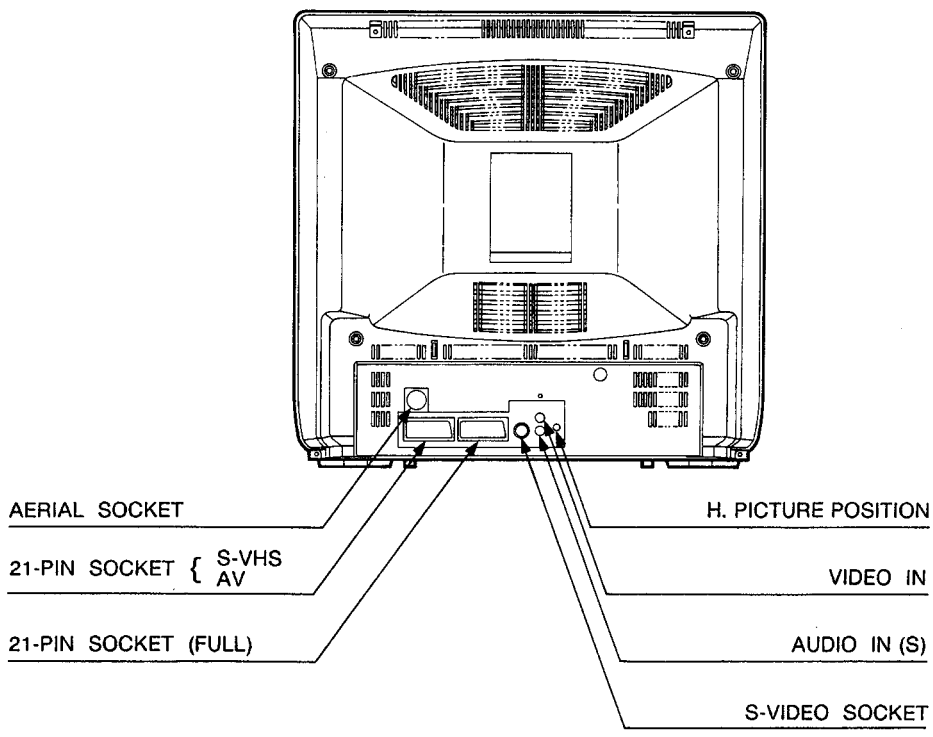

REMOTE HAND HELD UNIT

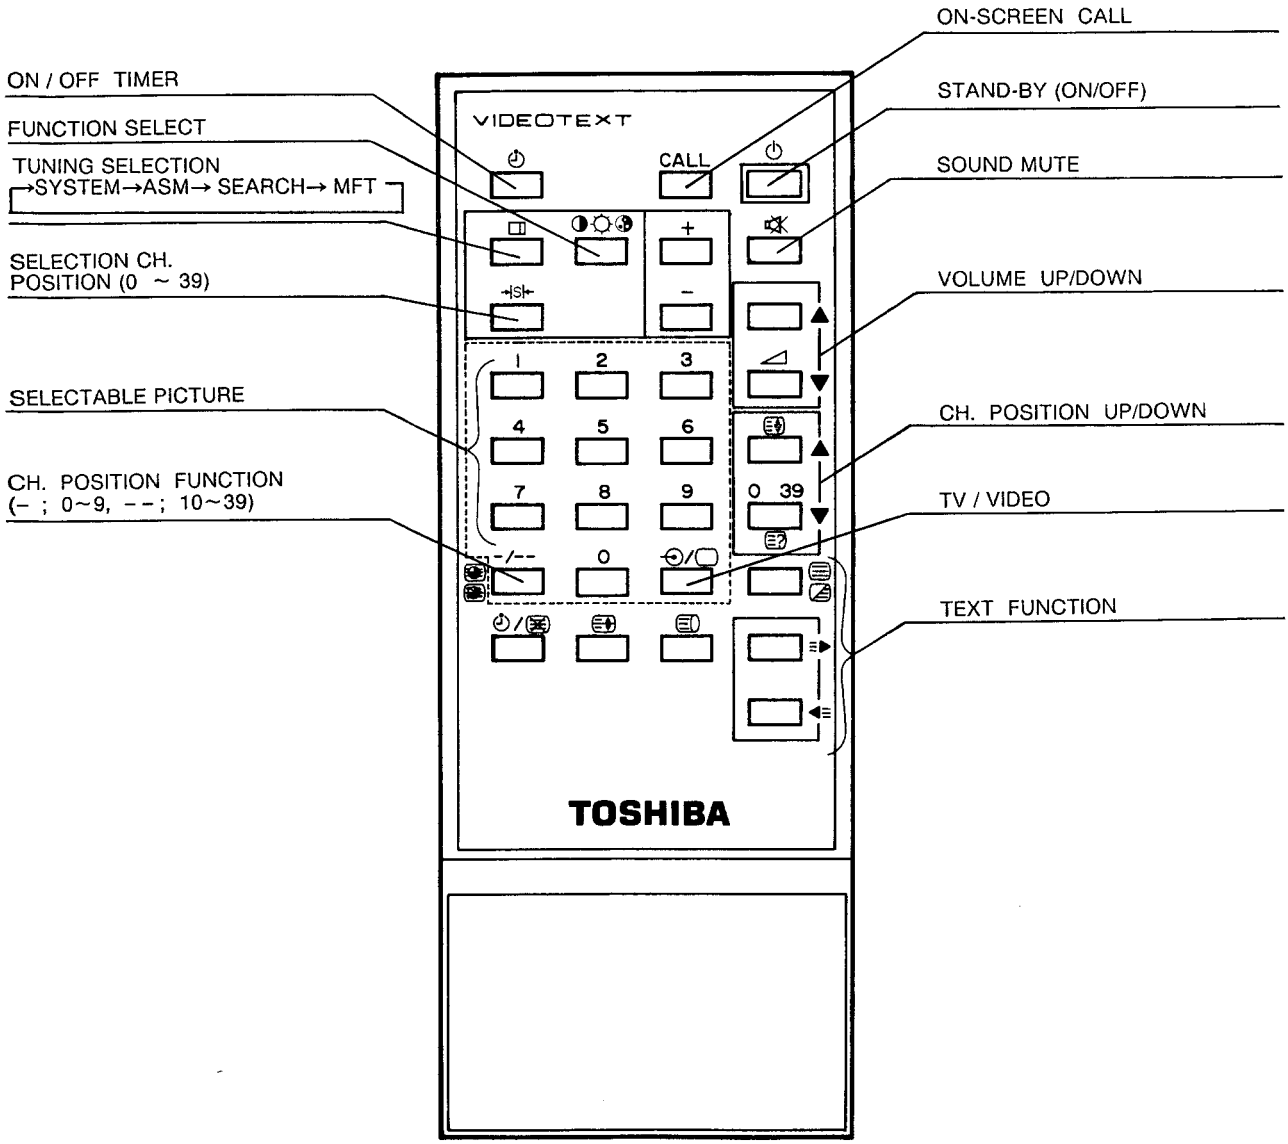

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

INSTALLATION AND SERVICE ADJUSTMENTS

GENERAL INFORMATIONS

All adjustments are thoroughly checked and corrected when the receiver leaves the factory. Therefore the receiver should operate normally and produce proper colour and B/W pictures upon installation. However, several minor adjustments may be required depending on the particular location in which the receiver is operated.
This receiver is shipped completely in cardboard carton. Carefully draw out the receiver from the carton and remove all packing materials.
Plug the power cord into a convenient 220 volts 50 Hz AC two pin power outlet. Turn the receiver ON. Check and adjust all the customer controls such as BRIGHTNESS, CONTRAST and COLOUR Controls to obtain natural colour or B/W picture.

AUTOMATIC DEGAUSSING

A degaussing coil is mounted around the picture tube so that external degaussing after moving the receiver is normally unnecessary, providing the receiver is properly degaussed upon installation. The degaussing coil operates for about 1 second after the power to the receiver is switched ON. If the set is moved or faced in a different direction, the power switch must be switched off at least one hour in order that the automatic degaussing circuit operates properly. Should the chassis or parts of the cabinet become magnetized to cause poor colour purity, use an external degaussing coil. Slowly move the degaussing coil around the faceplate of the picture tube, the sides and front of the receiver and slowly withdraw the coil to a distance of about 2 m before disconnecting it from AC source. If colour shading still persists, perform the COLOUR PURITY ADJUSTMENT and CONVERGENCE ADJUSTMENTS procedures.

+ 120 VOLT POWER SUPPLY ADJUSTMENT (R851)

CAUTION: +B voltage closely relates to the high voltage. To prevent hazardous X-RAY RADIATION, the +B voltage must be properly adjusted to +120 volts.

1. Tune in an active channel. Adjust the BRIGHTNESS and CONTRAST Controls for normal picture.
2. Check that the AC power Line voltage is normal. (AC 220 volts, 50 Hz)
3. Connect a digital voltmeter to both leads of C451.
4. Adjust R851 for 120V reading on the meter.
5. Remove the digital voltmeter.

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis.

1. Connect an accurate high voltage meter to the second anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST Controls to minimum (zero beam current).
3. High voltage will be measured below 29.0 kV.
4. Rotate the BRIGHTNESS Control to both extremes to be sure the high voltage does not exceed the limit of 29.0 kV under any conditions.

HEIGHT ADJUSTMENT

1. Receive the WG PHILIPS pattern, and set the contrast and colour to minimum, and the brightness to centre.
2. Change the VERT POSITION SW (S301) so the round shape in the pattern is located in the centre of screen.
3. HEIGHT Control (R351) changes the size of the picture or pattern, having an equal effect on the top and bottom. Make final adjustment to overscan the mask 2 cm at top and bottom.

HORIZONTAL CENTRE ADJUSTMENT

1. Receive the WG PHILIPS pattern.
2. Set the contrast and colour to minimum, and the bringhtness to centre.
3. Adjust H. CENTRE USER Control (R452) to the click (centre) position.
4. Adjust H. CENTRE SUB Control (R451) so the pattern centre can be located at the screen centre.

FOCUS ADJUSTMENT

Adjust FOCUS Control on FLYBACK TRANS.(T461) for well defined scanning lines in the centre area on the screen.

DELAYED R-F AGC ADJUSTMENT

1. Tune the set in the strongest station in your area.
2. Turn AGC DELAY Control (R151) on PIF/SIF Board to fully counterclockwise position.
3. Adjust AGC DELAY Control clockwise until noise (snow) disappears on the screen.

BELL COIL (LM01) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Connect the synchroscope to the terminal pin 2 of LM01.
3. Adjust LM01 for the flat level of amplitude in each colour bar waveform on the scope. (See figure 1.)

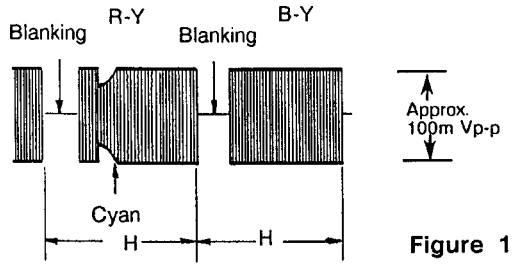

Figure 1.

IDENT COIL (LM04) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Connect the DC voltmeter (Digital Voltmeter) to the pin 23 of IC501.
3. Adjust LM04 for the maximum indication (approx. DC10V) on the meter.

B-Y, R-Y DEMOD COIL (LM02, LM03) ADJUSTMENT

1. Receive SECAM colour bar signal.
2. Set the COLOUR, BRIGHTNESS and CONTRAST Controls free.
3. Connect the synchroscope to the pin 62 of IC501.
4. Adjust LM02 so that the white level in picture part reaches to the vertical retrace line. (See figure 2.)
5. Then change the connection of synchroscope from the pin 62 to the pin 60 of IC501.
6. Adjust LM03 so that the white level in picture part reaches to the vertical retrace line. (See figure 3.)

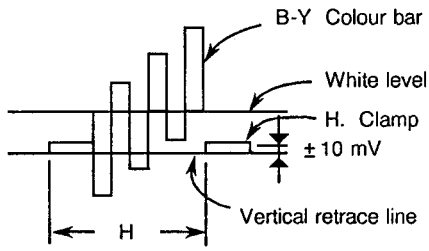

Figure 2.

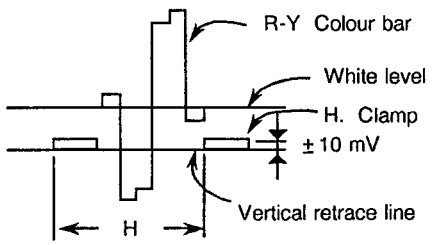

Figure 3.

PAL MATRIX ADJUSTMENT

1. Tune in the colour programme of the Philips pattern.
2. Set the COLOUR Control to obtain the proper colour.
3. If the PAL MATRIX adjustment is incorrect, the Venetian Blind would appear in the colour bars area. This case needs the adjustment.
4. At the first, adjust DL PHASE ADJ. Coil (L551) to minimize the Venetian Blind.
5. Next adjust 1H-DL ADJ. VR (R551) to minimize the Blind.
6. If the Venetian Blind still remains, adjust 1H-DL PHASE ADJ. Coil (L551) to minimize the Blind again.
7. Repeat the item 5 and 6 procedures, adjust the R551 and L551 until the Blind does not appear.

CRT GREY SCALE ADJUSTMENT

1. Tune in an active channel.
2. Turn the SCREEN Control (on T461) fuly counter-clockwise.
3. Set the RED, GREEN and BLUE CUT OFF Controls (R557, R558, R559) counterclockwise to the minimum position.
4. Set the GREEN and BLUE DRIVE Controls (R252, R253) to the mid position.
5. Set the CUT OFF SW. (S202) in the H. line position.
6. Short temporarily terminal of RASTER CHIP on the CRT DRIVE Board.
7. Set the CONTRAST, COLOUR Controls to minimum and BRIGHTNESS Control to centre. Set the SUB BRIGHTNESS Control to minimum.
8. Rotate the SCREEN Control gradually clockwise until the first horizontal line of a colour (RED, GREEN or BLUE) appears slightly on the screen. Set the SCREEN Control to this position.
9. Open the terminal of RASTER CHIP on the CRT DRIVE Board.
10. Adjust the CUT OFF Controls to obtain the slightly lighted horizontal lines in the same levels of three colours (RED, GREEN and BLUE). The lines may look like white if the CUT OFF Controls are adjusted properly.
11. Return the CUT OFF SW. (S202) in the receiving position.
12. Set the BRIGHTNESS Control to the maximum and COLOUR Control to the minimum.
13. Adjust the BLUE and GREEN DRIVE Controls (R252/R253) to obtain proper white-balanced picture in high light areas.
14. Set the BRIGHTNESS and CONTRAST Controls to obtain dark grey raster. Then check the white balance in low brightness. If the white balance is not proper, retouch the CUT OFF Controls and DRIVE Controls to obtain a good white balance in both low and high light areas.

SUB-BRIGHTNESS ADJUSTMENT

1. Tune in a colour programme.
2. Set the CONTRAST Control to the maximum and the BRIGHTNESS Control to the centre.
3. Set the COLOUR Control to the minimum.
4. Set the SUB-BRIGHT. Control (R255) to the centre and leave the receiver for five minutes in this state.
5. Watching the picture well, adjust the SUB-BRIGHT. Control in the position where the picture does not show evidence of blooming in high bright area and not appear too dark in low bright portion.
6. Check the proper picture variation by rotating the CONTRAST and BRIGHTNESS Controls to both extremes.
7. If the picture does not appear dark with the CONTRAST and BRIGHTNESS Controls turned to the minimum, or not appear bright with the controls turned to the maximum, adjust the SUB-BRIGHT. Control again for the acceptable picture.

PICTURE I-F SWEEP ALIGNMENT

GENERAL	Refer to figure 4 for test equipment connection.
PRELIMINARY STEPS	1. Disconnect the IF Board from the Main Board. 2. Supply +12 volts to the IF Board.
SWEEP/MARKER GENERATOR	Connect to the pin 6 of P101 as shown in figure 4 on the IF Board. Set to 30 ~ 40 MHz sweep with signal level of 75 ~ 85 dBμ.
OSCILLOSCOPE	Connect though the detector to the pin 18 of IC101 on the IF Board.

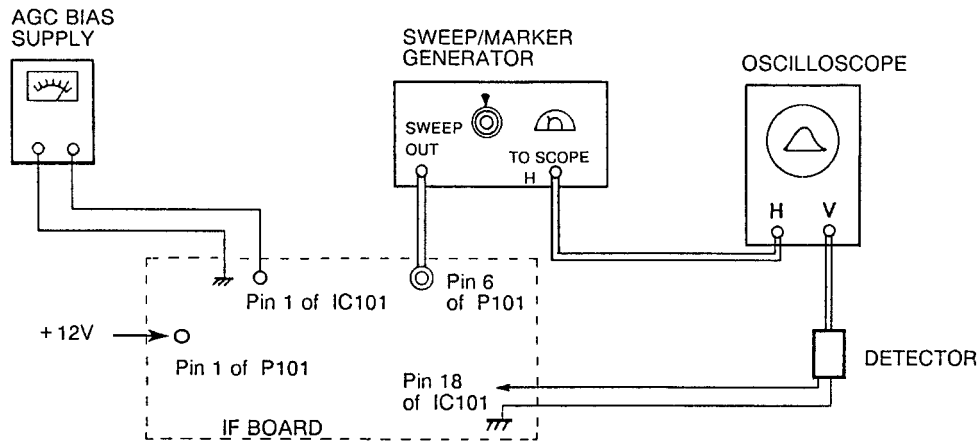

Figure 4. Picture IF Sweep Alignment

STEP	SWEEP/MARGER GENERATOR	ADJUST	REMARKS
Detector Coil	38.9 MHz Marker "ON"	L151	• Supply +2 to +3 volts to pin 1 of IC101 to set the output level for 0.4 Vp-p on the scope. • Adjust L151 so that the marker position (38.9 MHz) on the response can lower to minimum. (See figure 5.)
After completing the above steps, disconnect the equipment and re-solder the liniks on the Main Board, and adjust the AGC Delay control (R151) following DELAYED RF AGC ADJUSTMENTS.			

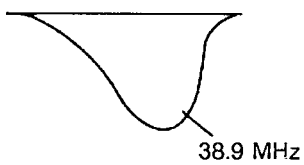

Figure 5. Magnified Response Curve

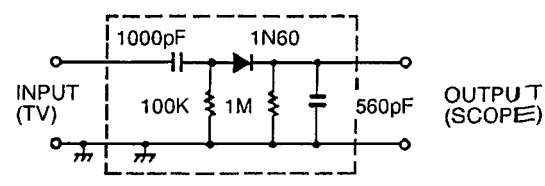

Detector Diagram

AFC ALIGNMENT

GENERAL ..... Refer to figure 6 for test equipment connection.
PRELIMINARY STEPS ..... 1. Disconnect the IF Board from the Main Board.
2. Supply +12 volts to the IF Board. (Pin 1 of P101)
3. Turn AGC DELAY Control (R151) on the IF Board fully clockwise.
DVM ..... Connect to the resistor R171 (ⓔ in figure 3) and ground.

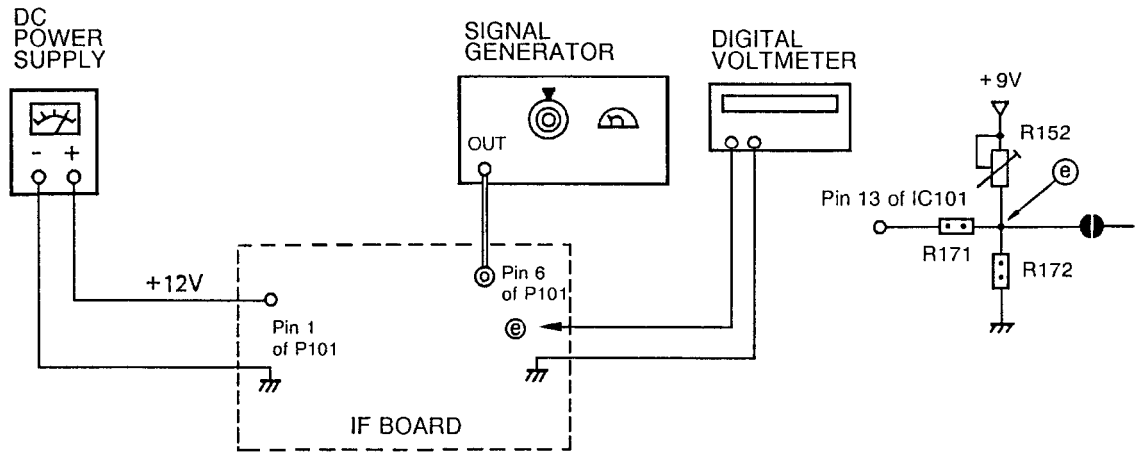

Figure 6. AFC Alignment

STEP	SIGNAL GENERATOR	ADJUST	REMARKS
1. AFC Balance (R152)	NO SIGNAL	R152	• Short the pin 1 of IC101 to ground. • Adjust R152 for 4.5 volts at the point ⓔ in figure 6.
2. AFC Coil (L152)	38.9 MHz CARRIER WAVE (Level : 75 to 85 dBμ)	L152	• Remove the short of pin 1 of IC101. • Connect IF carrier wave to the pin 6 of P101. • Adjust L152 for 2.5 volts on the meter at the point ⓔ.

TROUBLESHOOTING CHARTS

The following charts are devoted to troubleshooting which, if followed carefully, will assist you in tracking down a fault to the correct stage.
In order to utilize the charts (fault trees), firstly establish the complaint, i.e. – No Raster, No Sound.
Locate the chart applicable and then progress through the various alternatives until a final block indicates the offending components or stage.

1. NO RASTER AND NO SOUND

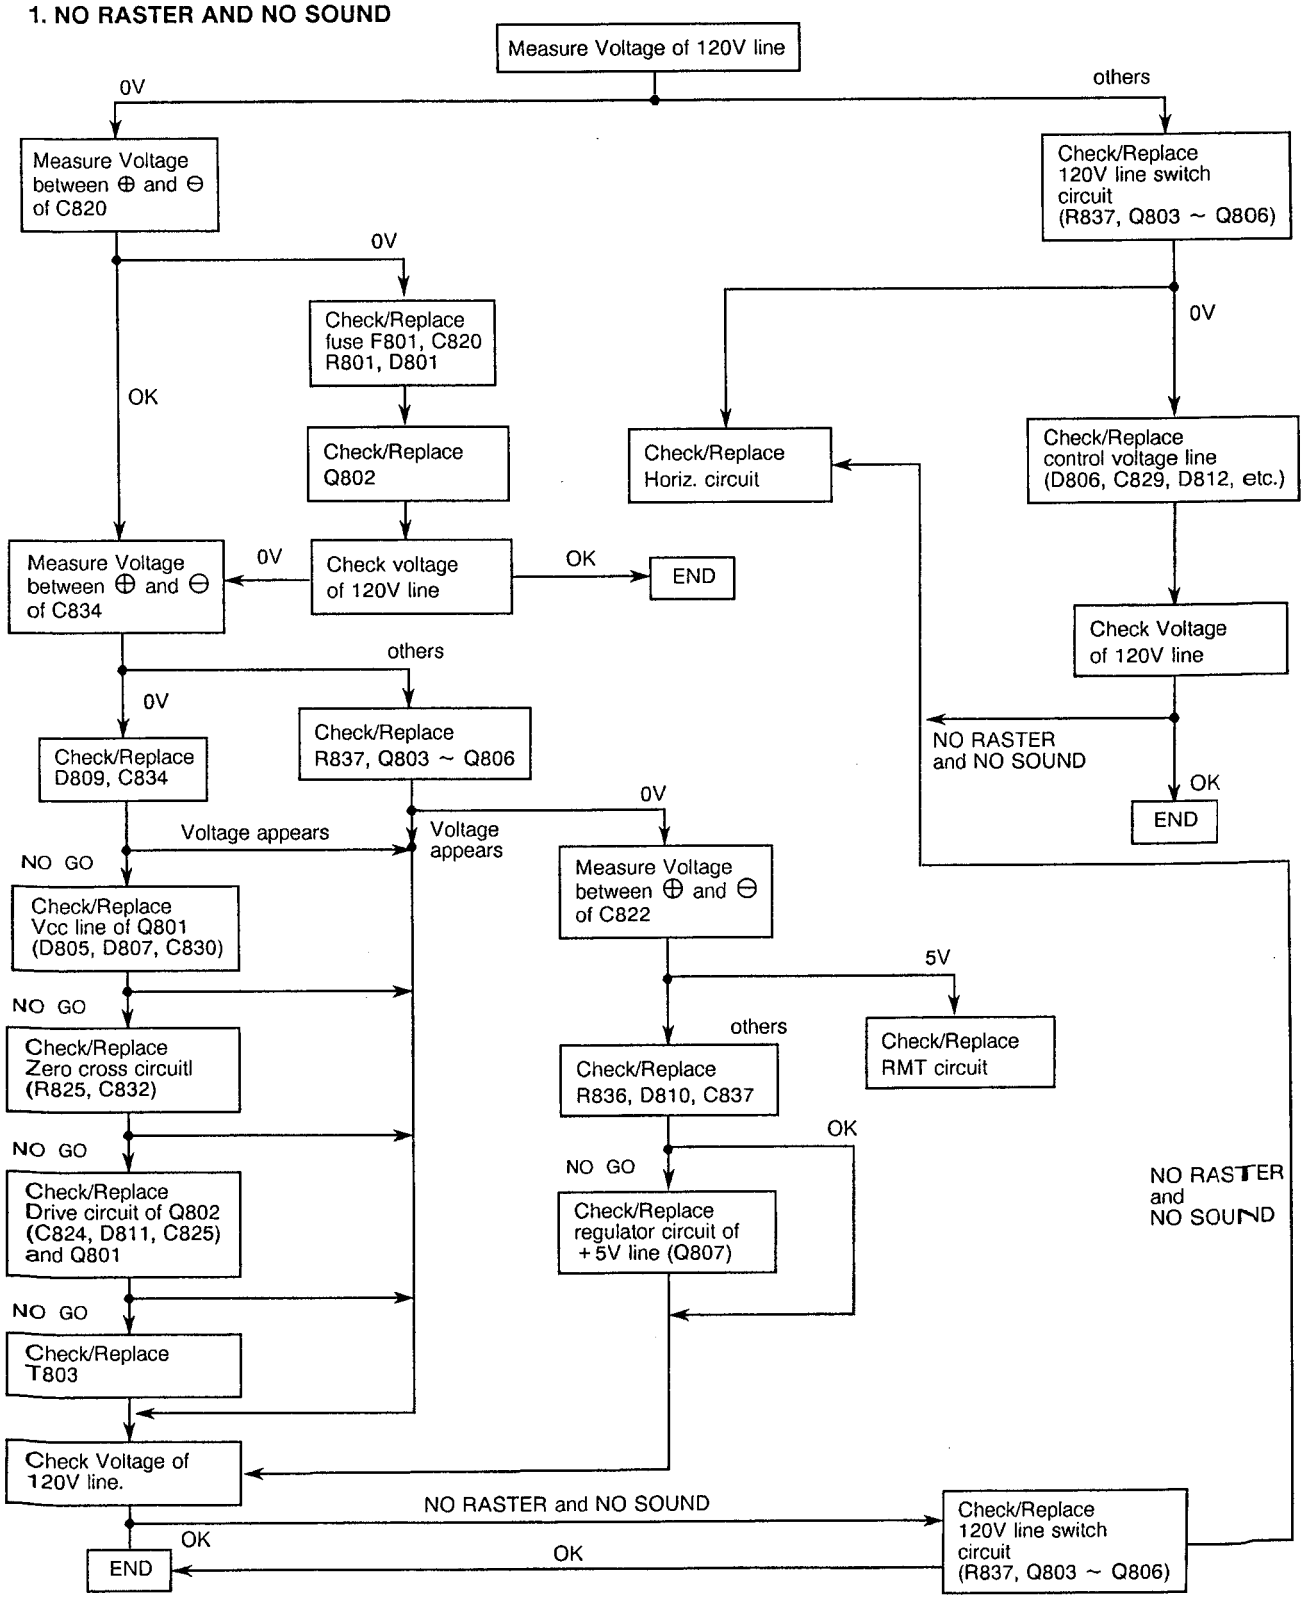

2. NO RASTER (NOISE OR WEAK SOUND)

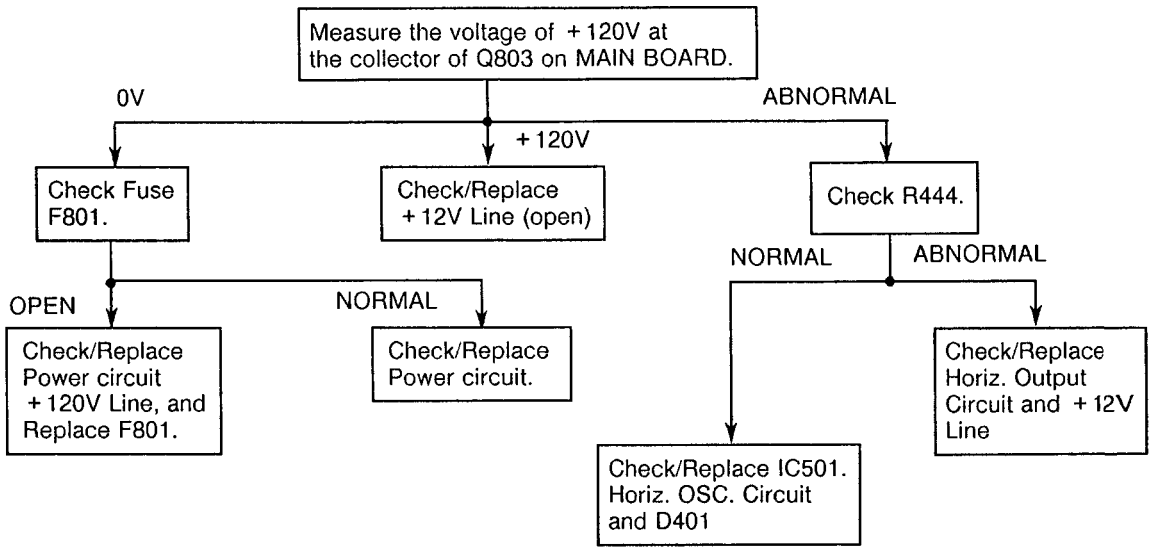

3. NO RASTER (SOUND OK)

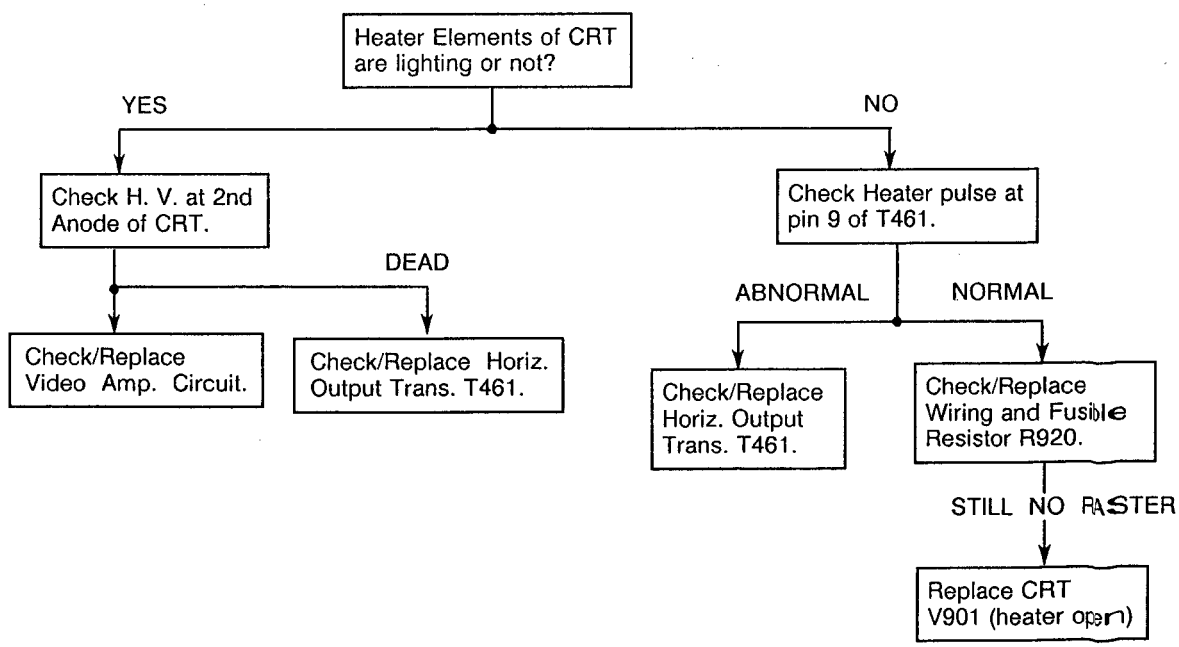
Heater Elements of CRT are lighting or not?
YES
NO
Check H. V. at 2nd Anode of CRT.
Check Heater pulse at pin 9 of T461.
DEAD
ABNORMAL
NORMAL
Check/Replace Video Amp. Circuit.
Check/Replace Horiz. Output Trans. T461.
Check/Replace Horiz. Output Trans. T461.
Check/Replace Wiring and Fusible Resistor R920.
STILL NO RASTER
Replace CRT V901 (heater open)

4. NO SOUND

Note: Check the sound signal waveform for shaded area below.

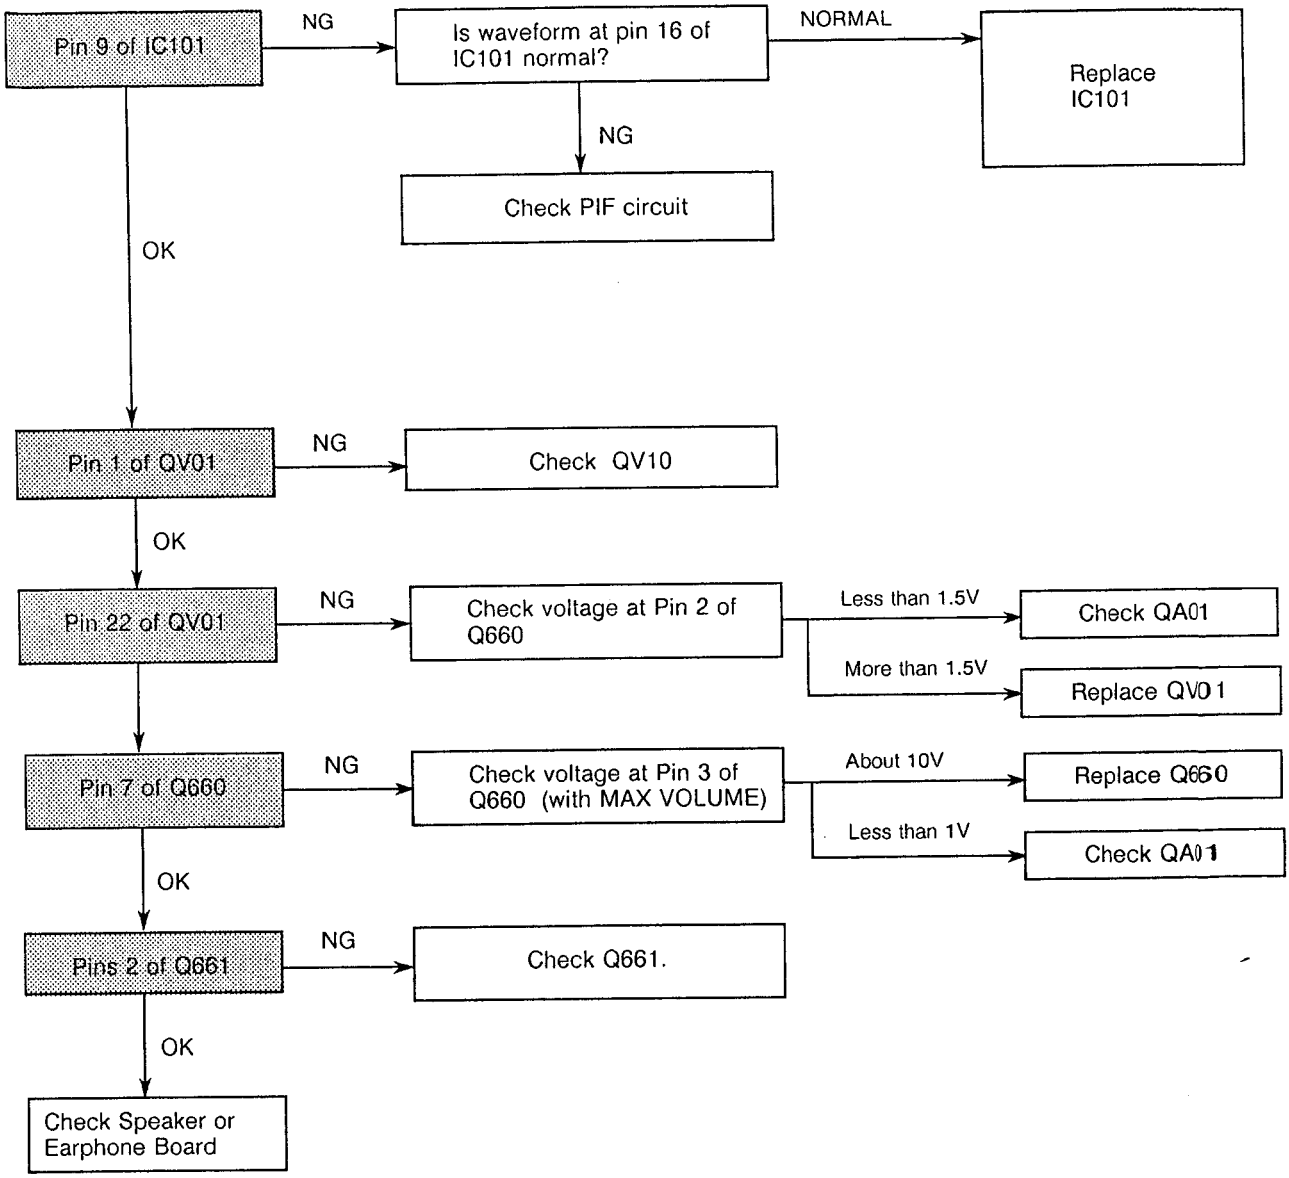

5. NO PICTURE

Check video signal waveform for shaded area below.

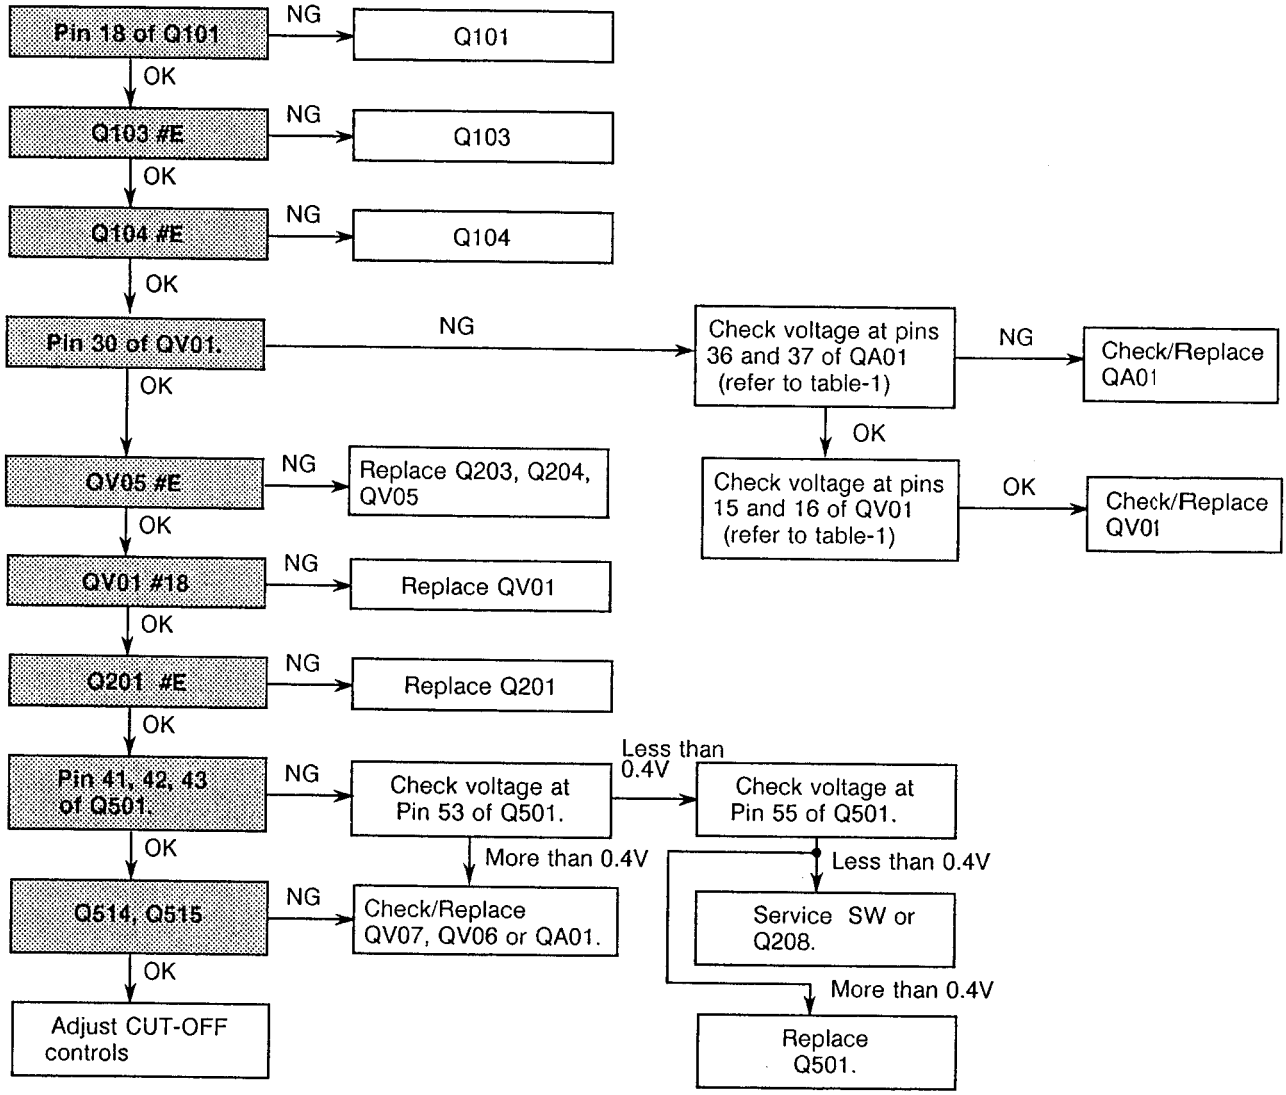

Table-1 (A/V SW. LOGIC)

MODE	QA01		QV01	
	Pin 36	Pin 37	Pin 15	Pin 16
TV	*H	*H	*H	*H
VIDEO-1	H	L	H	L
VIDEO-2	L	L	L	L
VIDEO-2S	L	H	L	L

L : Less than 2.5V
H : More than 2.5V

Note: * marks denote as follows.
AV SW LOGIC is same as VIDEO-1 mode when pin 8 of 21 PIN-1 is high level.
AV SW LOGIC is same as VIDEO-2 mode when pin 8 of 21 PIN-2 is high level.
AV SW LOGIC is same as VIDEO-1 mode when pin 8 of 21 PIN-1 and 21 PIN-2 are high level.

6. CHANNEL SELECTOR TROUBLE

[CHART 1]

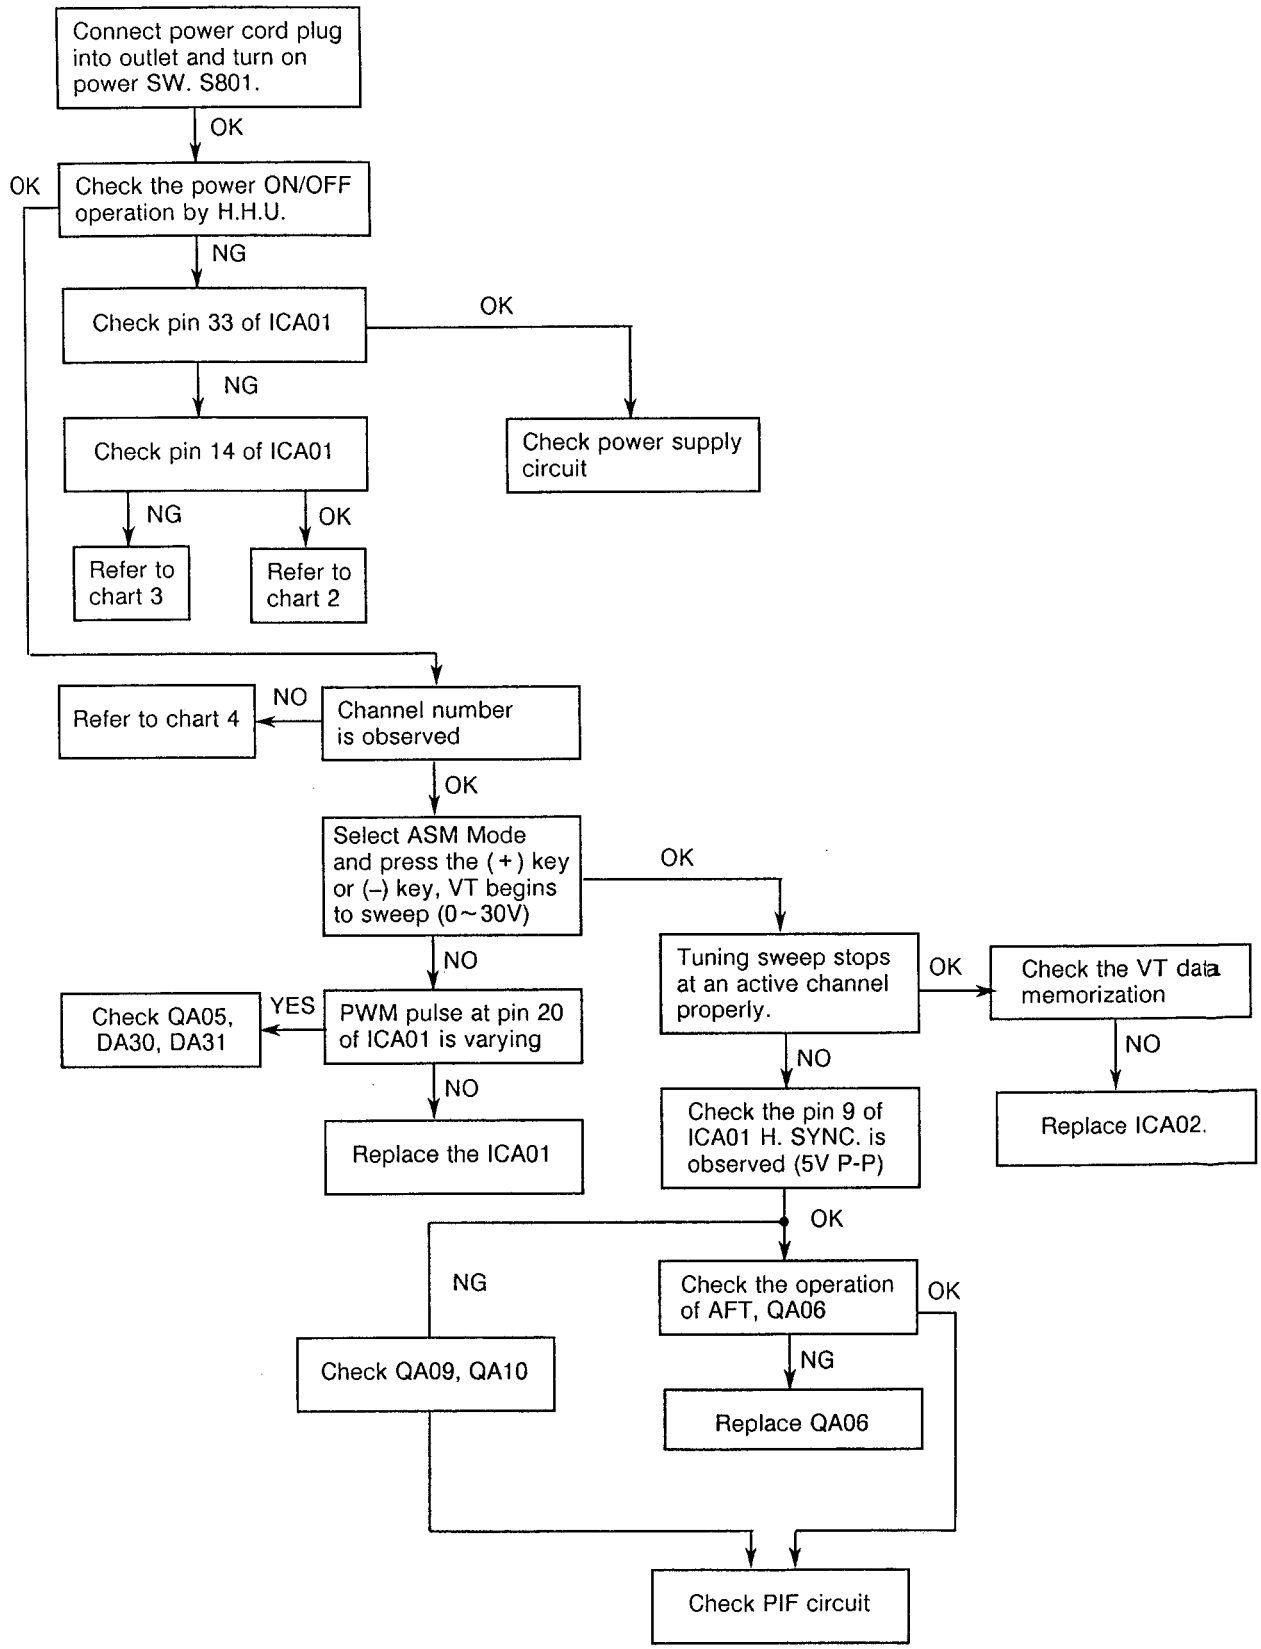

[CHART 2] Microcomputer (ICA01) Operation Check

NOTE: Before checking Microcomputer, check that control buttons and their connection work properly.

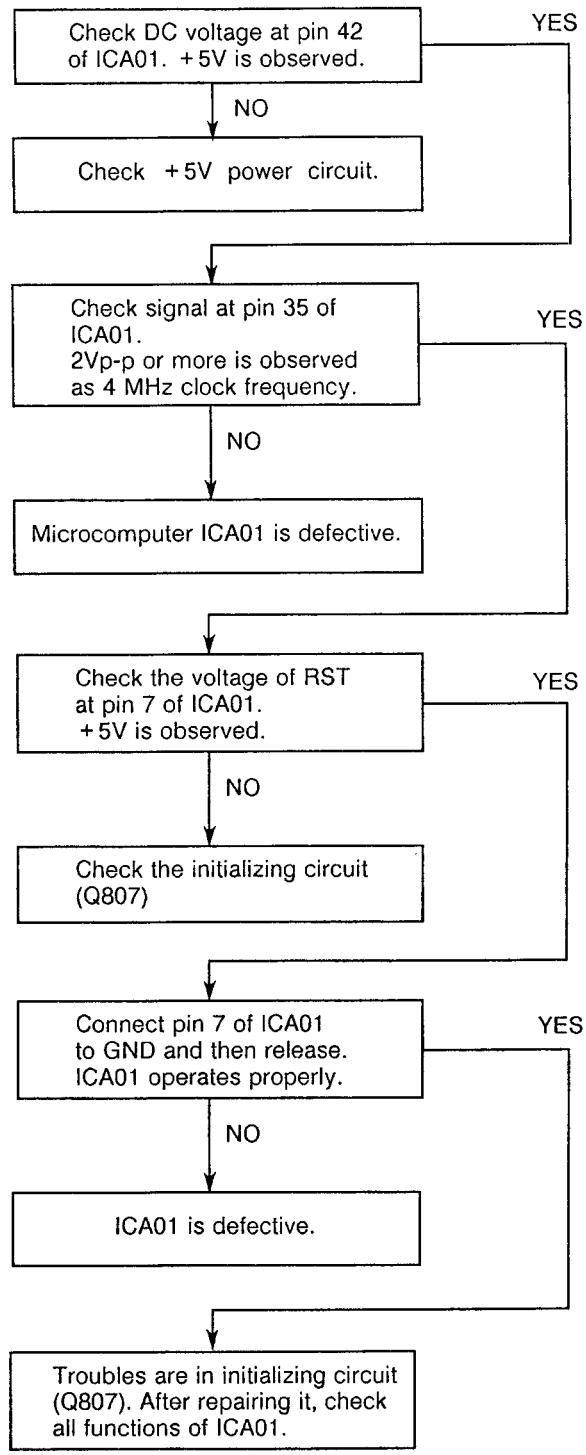
Check DC voltage at pin 42 of ICA01. +5V is observed.
YES
NO
Check +5V power circuit.
Check signal at pin 35 of ICA01. 2Vp-p or more is observed as 4 MHz clock frequency.
YES
NO
Microcomputer ICA01 is defective.
Check the voltage of RST at pin 7 of ICA01. +5V is observed.
YES
NO
Check the initializing circuit (Q807)
Connect pin 7 of ICA01 to GND and then release. ICA01 operates properly.
YES
NO
ICA01 is defective.
Troubles are in initializing circuit (Q807). After repairing it, check all functions of ICA01.

7. NO VERT. SCAN (ONE HORIZ. LINE RASTER)

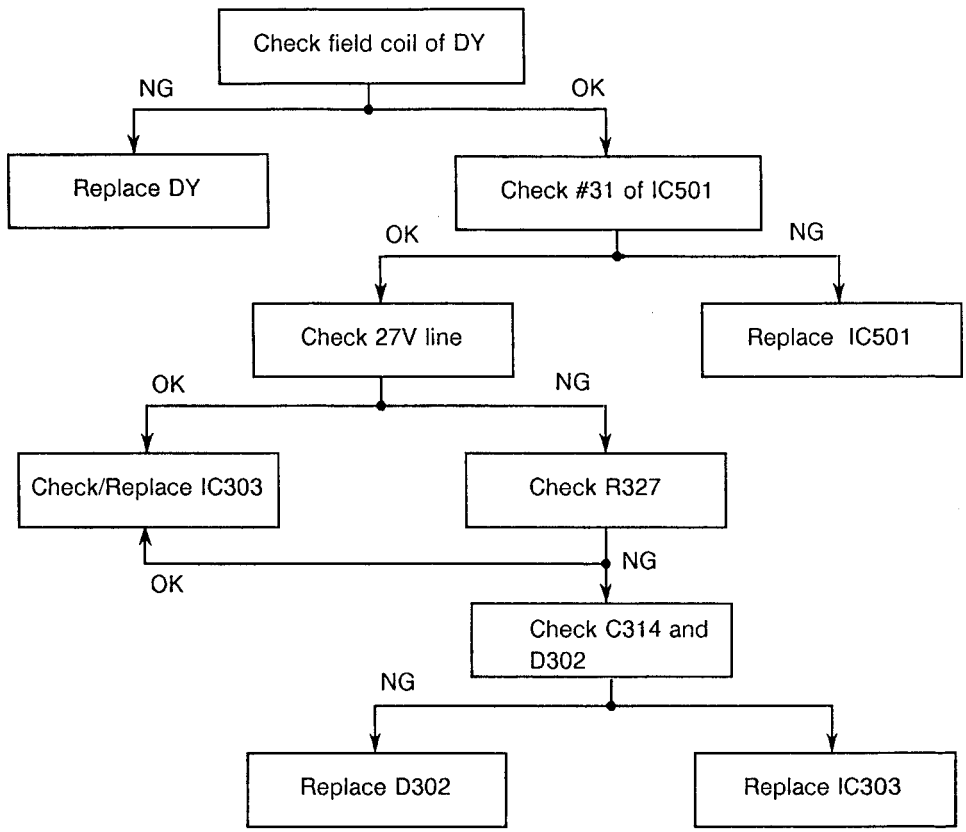

8. OUT OF VERT. SYNC. AND HORIZ. SYNC.

Check/Replace Sync Circuit pin 33 of IC501.

9. OUT OF HORIZ. SYNC.

Check/Replace Horiz. OSC Circuit and Horiz. AFC Circuit connected to Pins 36, 37 and 38 of IC501.
Check/Replace IC501.

[CHART 3] Remote Control Operation Check

Note : Before checking RMT operation, check that key operation on TV set is proper.

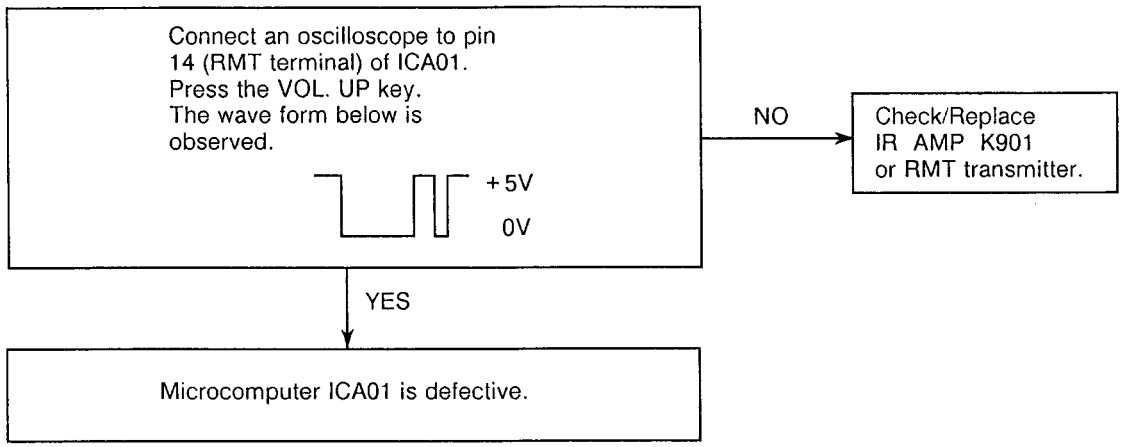
Connect an oscilloscope to pin 14 (RMT terminal) of ICA01.
Press the VOL. UP key.
The wave form below is observed.
+5V
0V
NO
Check/Replace IR AMP K901 or RMT transmitter.
YES
Microcomputer ICA01 is defective.

[CHART 4] On Screen Display Operation Check

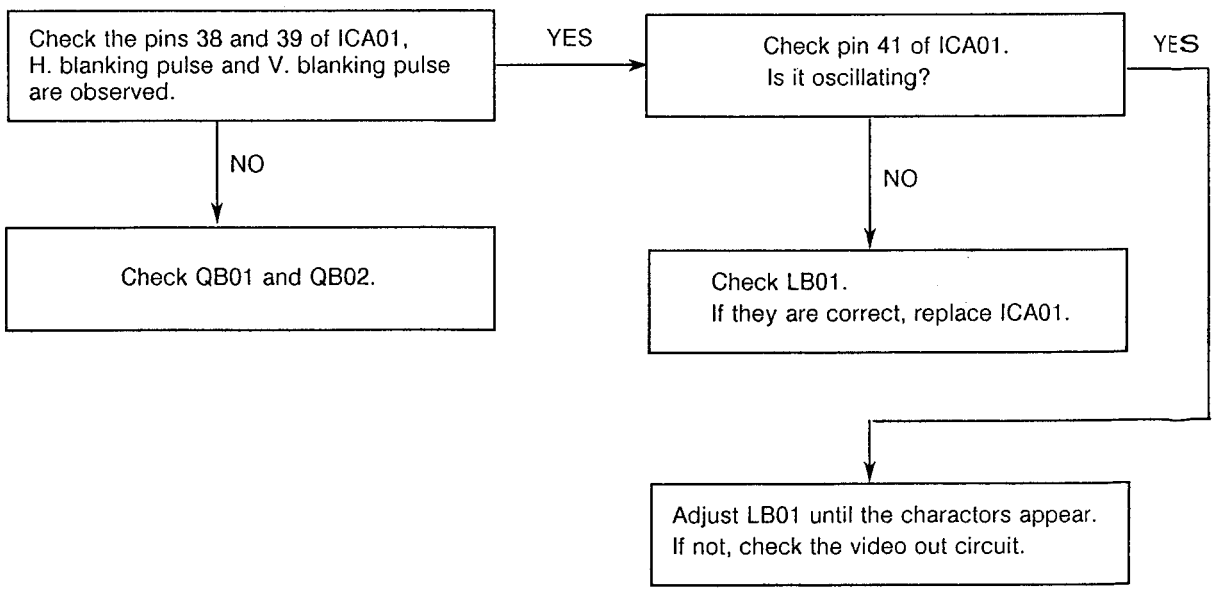
Check the pins 38 and 39 of ICA01, H. blanking pulse and V. blanking pulse are observed.
YES
Check pin 41 of ICA01. Is it oscillating?
YES
NO
Check QB01 and QB02.
NO
Check LB01. If they are correct, replace ICA01.
Adjust LB01 until the charactors appear. If not, check the video out circuit.

CABINET REPLACEMENT PARTS LIST

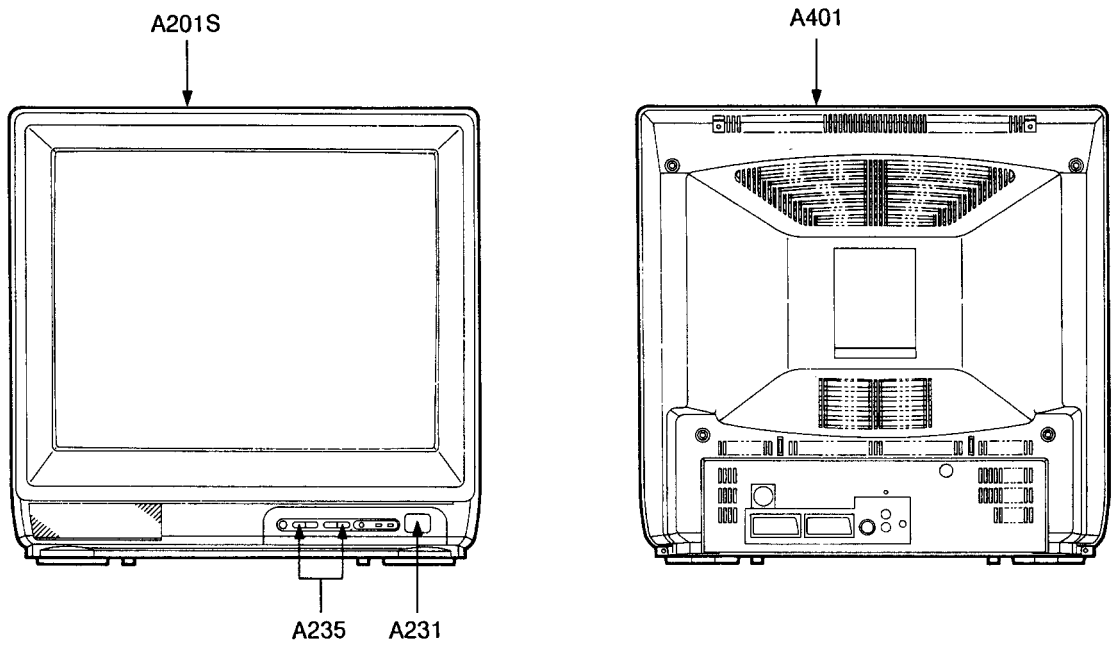

Location No.	Part No.	Description
A201S	23418574	Front Cover
A231	23443465	Button, POWER
A235	23443466	Button, UP-DOWN
A401	23423519	Back Cover
A411	23998606	Label, Model No., B/C
A412	23995762	Label (On B/C)
A420	23838432	Ornament, Trim
A421	23838433	Ornament, Tuner
A701	23523663	Carton Box
A702	23934241	Packing, Bottom
A703	23934242	Packing, Top
A710	23998633	Label, Model No., Carton
Y101	23994901	Owner's Manual

CHASSIS REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION" , "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 2 OF THIS MANUAL.

CAUTION: The international hazard symbols in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 2. Do not degrade the safety of the receiver through improper servicing.

NOTICE: The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.

ABBREVIATIONS:

Capacitors..... CD : Ceramic Disk PF : Plastic Film EL : Electrolytic
Resistors..... CF : Carbon Film CC : Carbon Composition MF : Metal Film
OMF : Oxide Metal Film VR : Variable Resistor FR : Fusible Resistor

(All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Location No.	Part No.	Description
CAPACITORS		
C101	24212102	CD, 1000pF, ±10%
C102	24232103	CD, 0.01μF, +80%, −20%
C103	24232103	CD, 0.01μF, +80%, −20%
C104	24206228	EL, 0.22μF, 50V
C105	24232103	CD, 0.01μF, +80%, −20%
C107	24212102	CD, 1000pF, ±10%
C108	24085031	EL, 1μF, ±20%, 25V, Non-Polar
C109	24633101	EL, 100μF, 16V
C111	24633470	EL, 47μF, 16V
C112	24232103	CD, 0.01μF, +80%, −20%
C116	24232103	CD, 0.01μF, +80%, −20%
C161	24357201	CD, 200pF
C162	24232103	CD, 0.01μF, +80%, −20%
C163	24212102	CD, 1000pF, ±10%
C164	24212102	CD, 1000pF, ±10%
C165	24212102	CD, 1000pF, ±10%
C166	24212102	CD, 1000pF, ±10%
C171	24436220	CD, 22pF
C172	24212102	CD, 1000pF, ±10%
C201	24636100	EL, 10μF, 50V
C202	24795101	EL, 100μF, 25V
C203	24232103	CD, 0.01μF, +80%, −20%
C204	24797220	EL, 22μF, 50V
C205	24636478	EL, 0.47μF, 50V
C208	24212102	CD, 1000pF, ±10%
C209	24232103	CD, 0.01μF, +80%, −20%
C210	24636100	EL, 10μF, 50V
C211	24212561	CD, 560pF, ±10%
C212	24636010	EL, 1μF, 50V
C213	24530104	PF, 0.1μF, ±10%, 63V
C214	24633101	EL, 100μF, 16V
C240	24530474	PF, 0.47μF, ±10%, 63V
C301	24636229	EL, 2.2μF, 50V
C302	24212152	CD, 1500pF, ±10%
C303	24617912	EL, 2.2μF, ±10%, 50V
C304	24212102	CD, 1000pF, ±10%
C307	24232103	CD, 0.01μF, +80%, −20%
C312	24593243	PF, 0.024μF
C313	24755101	EL, 100μF, 35V

Location No.	Part No.	Description
C314	24796102	EL, 1000μF, 35V
C315	24214221	CD, 220pF, ±10%, 500V
C316	24667332	EL, 3300μF, ±20%, 25V
C317	24617912	EL, 2.2μF, ±10%, 50V
C318	24082049	PF, 0.047μF, 100V
C319	24693104	PF, 0.1μF, 100V
C321	24214561	CD, 560pF, ±10%, 500V
C328	24212272	CD, 2700pF, ±10%
C368	24530104	PF, 0.1μF, ±10%, 63V
C402	24353241	CD, 240pF
C403	24636339	EL, 3.3μF, 50V
C405	24593203	PF, 0.02μF
C406	24593203	PF, 0.02μF
C407	24593243	PF, 0.024μF
C408	24636100	EL, 10μF, 50V
C409	24232103	CD, 0.01μF, +80%, −20%
C412	24550182	PF, 1800pF, 63V
C413	24550182	PF, 1800pF, 63V
C414	24212471	CD, 470pF, ±10%
C416	24214271	CD, 270pF, ±10%, 500V
⚠ C440	24095636	PF, 7200pF, ±3%, 1600V
C441	24214221	CD, 220pF, ±10%, 500V
C443	24214221	CD, 220pF, ±10%, 500V
C445	24095903	PF, 0.056μF, ±10%, 250V
C447	24644479	EL, 4.7μF, 250V
C448	24795102	EL, 1000μF, 25V
C449	24794471	EL, 470μF, 16V
C451	24640908	EL, 33μF, ±20%, 160V
⚠ C463	24212222	CD, 2200pF, ±10%
C465	24095949	PF, 0.33μF, 200V
C502	24636100	EL, 10μF, 50V
C503	24436101	CD, 100pF
C504	24436101	CD, 100pF
C505	24550273	PF, 0.027μF, 63V
C506	24232103	CD, 0.01μF, +80%, −20%
C507	24530103	PF, 0.01μF, ±10%, 63V
C508	24085028	EL, 2.2μF, 25V, Non-Polar
C509	24797220	EL, 22μF, 50V
C510	24232103	CD, 0.01μF, +80%, −20%
C511	24232103	CD, 0.01μF, +80%, −20%
C512	24353200	CD, 20pF

Location No.	Part No.	Description
C513	24353330	CD, 33pF
C515	24636220	EL, 22μF, 50V
C516	24530104	PF, 0.1μF, ±10%, 63V
C517	24530104	PF, 0.1μF, ±10%, 63V
C518	24232103	CD, 0.01μF, +80%, −20%
C519	24232103	CD, 0.01μF, +80%, −20%
C520	24636478	EL, 0.47μF, 50V
C521	24530474	PF, 0.47μF, ±10%, 63V
C522	24530474	PF, 0.47μF, ±10%, 63V
C523	24530474	PF, 0.47μF, ±10%, 63V
C524	24232103	CD, 0.01μF, +80%, −20%
C525	24436820	CD, 82pF
C526	24436820	CD, 82pF
C527	24436820	CD, 82pF
C530	24796220	EL, 22μF, 35V
C532	24436330	CD, 33pF
C533	24436330	CD, 33pF
C534	24436240	CD, 24pF
C535	24636100	EL, 10μF, 50V
C536	24636478	EL, 0.47μF, 50V
C537	24794101	EL, 100μF, 16V
C539	24232103	CD, 0.01μF, +80%, −20%
C540	24633100	EL, 10μF, 16V
C550	24232103	CD, 0.01μF, +80%, −20%
C551	24212102	CD, 1000pF, ±10%
C601	24436470	CD, 47pF
C602	24436470	CD, 47pF
C603	24232103	CD, 0.01μF, +80%, −20%
C604	24212272	CD, 2700pF, ±10%
C605	24232103	CD, 0.01μF, +80%, −20%
C606	24353620	CD, 62pF
C610	24232103	CD, 0.01μF, +80%, −20%
C611	24232103	CD, 0.01μF, +80%, −20%
C613	24636010	EL, 1μF, 50V
C660	24085031	EL, 1μF, ±20%, 25V, Non-Polar
C661	24636100	EL, 10μF, 50V
C662	24636100	EL, 10μF, 50V
C663	24797470	EL, 47μF, 50V
C664	24636010	EL, 1μF, 50V
C665	24796221	EL, 220μF, 35V
C666	24550104	PF, 0.1μF, 63V
C667	24795471	EL, 470μF, 25V
C668	24636478	EL, 0.47μF, 50V
C669	24550682	PF, 6800pF, 63V
C670	24634220	EL, 22μF, 25V
C671	24232103	CD, 0.01μF, +80%, −20%
C697	24550224	PF, 0.22μF, 63V
C698	24636479	EL, 4.7μF, 50V
C699	24634470	EL, 47μF, 25V
⚠ C801	24098999	PF, 0.1μF, ±20%, AC250V
⚠ C802	24098999	PF, 0.1μF, ±20%, AC250V
C805	24094656	CD, 2200pF, ±20%, AC400V
C806	24094656	CD, 2200pF, ±20%, AC400V
C815	24092281	CD, 4700pF, ±20%, AC250V
C816	24092281	CD, 4700pF, ±20%, AC250V
C817	24092281	CD, 4700pF, ±20%, AC250V
C818	24092281	CD, 4700pF, ±20%, AC250V
C820	24086871	EL, 120μF, ±20%, 400V
C821	24436101	CD, 100pF
C822	24636100	EL, 10μF, 50V
C823	24550682	PF, 6800pF, 63V
C824	24630747	EL, 22μF, ±20%, 25V
C825	24212102	CD, 1000pF, ±10%

Location No.	Part No.	Description
C826	24442331	CD, 330pF, ±10%, 2kV
C827	24232103	CD, 0.01μF, +80%, −20%
C828	24095914	PF, 2200pF, ±3%, 1600V
C829	24636010	EL, 1μF, 50V
C830	24797101	EL, 100μF, 50V
C831	24436331	CD, 330pF
C832	24593822	PF, 8200pF
C833	24442181	CD, 180pF, ±10%, 2kV
C834	24086953	EL, 220μF, ±20%, 160V
C835	24797220	EL, 22μF, 50V
C836	24214331	CD, 330pF, ±10%, 500V
C837	24795222	EL, 2200μF, 25V
C838	24795471	EL, 470μF, 25V
C901	24644479	EL, 4.7μF, 250V
C902	24095923	PF, 4700pF, 1600V
CA01	24212331	CD, 330pF, ±10%
CA02	24232103	CD, 0.01μF, +80%, −20%
CA07	24212102	CD, 1000pF, ±10%
CA08	24232103	CD, 0.01μF, +80%, −20%
CA09	24794470	EL, 47μF, 16V
CA10	24232103	CD, 0.01μF, +80%, −20%
CA11	24530472	PF, 4700pF, ±10%, 63V
CA12	24212561	CD, 560pF, ±10%
CA13	24633100	EL, 10μF, 16V
CA14	24794470	EL, 47μF, 16V
CA15	24232103	CD, 0.01μF, +80%, −20%
CA16	24232103	CD, 0.01μF, +80%, −20%
CA17	24232103	CD, 0.01μF, +80%, −20%
CA18	24232103	CD, 0.01μF, +80%, −20%
CA19	24232103	CD, 0.01μF, +80%, −20%
CA20	24636010	EL, 1μF, 50V
CA21	24436391	CD, 390pF
CA22	24436221	CD, 220pF
CA23	24530104	PF, 0.1μF, ±10%, 63V
CA24	24530104	PF, 0.1μF, ±10%, 63V
CA25	24636229	EL, 2.2μF, 50V
CA26	24232103	CD, 0.01μF, +80%, −20%
CA27	24232103	CD, 0.01μF, +80%, −20%
CA28	24530104	PF, 0.1μF, ±10%, 63V
CA29	24232103	CD, 0.01μF, +80%, −20%
CA30	24636479	EL, 4.7μF, 50V
CA31	24232103	CD, 0.01μF, +80%, −20%
CA32	24794471	EL, 470μF, 16V
CA33	24232103	CD, 0.01μF, +80%, −20%
CA36	24550104	PF, 0.1μF, 63V
CA37	24232103	CD, 0.01μF, +80%, −20%
CA40	24232103	CD, 0.01μF, +80%, −20%
CB01	24212101	CD, 100pF, ±10%
CF01	24232103	CD, 0.01μF, +80%, −20%
CF02	24636100	EL, 10μF, 50V
CF03	24794470	EL, 47μF, 16V
CF04	24085028	EL, 2.2μF, 25V, Non-Polar
CF05	24550683	PF, 0.068μF, 63V
CF06	24436221	CD, 220pF
CF07	24212561	CD, 560pF, ±10%
CF08	24550473	PF, 0.047μF, 63V
CF09	24353180	CD, 18pF
CF10	24636100	EL, 10μF, 50V
CF11	24550473	PF, 0.047μF, 63V
CF12	24794470	EL, 47μF, 16V
CF13	24232103	CD, 0.01μF, +80%, −20%
CF14	24232103	CD, 0.01μF, +80%, −20%
CF15	24436101	CD, 100pF
CF16	24353180	CD, 18pF

Location No.	Part No.	Description
CF19	24633100	EL, 10μF, 16V
CF20	24436150	CD, 15pF
CF21	24530102	PF, 1000pF, ±10%, 63V
CF22	24212471	CD, 470pF, ±10%
CF23	24550223	PF, 0.022μF, 63V
CF24	24436271	CD, 270pF
CF25	24436101	CD, 100pF
CF26	24353150	CD, 15pF
CF27	24436270	CD, 27pF
CF28	24232103	CD, 0.01μF, +80%, −20%
CF81	24633470	EL, 47μF, 16V
CF82	24633470	EL, 47μF, 16V
CH01	24636010	EL, 1μF, 50V
CH02	24636010	EL, 1μF, 50V
CH03	24636010	EL, 1μF, 50V
CH04	24636010	EL, 1μF, 50V
CH05	24636010	EL, 1μF, 50V
CH06	24636010	EL, 1μF, 50V
CH07	24636100	EL, 10μF, 50V
CM01	24436221	CD, 220pF
CM02	24436221	CD, 220pF
CM05	24232103	CD, 0.01μF, +80%, −20%
CM06	24357270	CD, 27pF
CM07	24550563	PF, 0.056μF, 63V
CM08	24232103	CD, 0.01μF, +80%, −20%
CM10	24436270	CD, 27pF
CN02	24436150	CD, 15pF
CN07	24436360	CD, 36pF
CN10	24436101	CD, 100pF
CV01	24636229	EL, 2.2μF, 50V
CV03	24636100	EL, 10μF, 50V
CV04	24636229	EL, 2.2μF, 50V
CV06	24636100	EL, 10μF, 50V
CV07	24636100	EL, 10μF, 50V
CV08	24636229	EL, 2.2μF, 50V
CV10	24636100	EL, 10μF, 50V
CV11	24636229	EL, 2.2μF, 50V
CV13	24636100	EL, 10μF, 50V
CV15	24636010	EL, 1μF, 50V
CV16	24232103	CD, 0.01μF, +80%, −20%
CV17	24232103	CD, 0.01μF, +80%, −20%
CV18	24633100	EL, 10μF, 16V
CV22	24633100	EL, 10μF, 16V
CV23	24212102	CD, 1000pF, ±10%
CV24	24633471	EL, 470μF, 16V
CV25	24212102	CD, 1000pF, ±10%
CV26	24232103	CD, 0.01μF, +80%, −20%
CV27	24633100	EL, 10μF, 16V
CV28	24212102	CD, 1000pF, ±10%
CV29	24085028	EL, 2.2μF, 25V, Non-Polar
CV31	24633471	EL, 470μF, 16V
CV32	24232103	CD, 0.01μF, +80%, −20%
CX02	24530474	PF, 0.47μF, ±10%, 63V
CX03	24530474	PF, 0.47μF, ±10%, 63V
CX04	24530474	PF, 0.47μF, ±10%, 63V
RESISTORS		
R101	24366152	CF, 1500 ohm
R103	24366152	CF, 1500 ohm
R104	24366103	CF, 10k ohm
R105	24366104	CF, 100k ohm
R106	24366562	CF, 5600 ohm
R107	24366562	CF, 5600 ohm
R108	24366222	CF, 2200 ohm

Location No.	Part No.	Description
R109	24366332	CF, 3300 ohm
R110	24366103	CF, 10k ohm
R113	24383560	OMF, 56 ohm, 2W
R115	24366101	CF, 100 ohm
R116	24366102	CF, 1k ohm
R117	24366221	CF, 220 ohm
R118	24552151	OMF, 150 ohm, 1/2W
R119	24366682	CF, 6800 ohm
R120	24366332	CF, 3300 ohm
R121	24366271	CF, 270 ohm
R122	24366271	CF, 270 ohm
R123	24366101	CF, 100 ohm
R125	24366101	CF, 100 ohm
R151	24066953	VR, 5k ohm, 1/10W
R152	24066946	VR, 1M ohm, 1/10W
R161	24366131	CF, 130 ohm
R164	24552101	OMF, 100 ohm, 1/2W
R166	24366680	CF, 68 ohm
R167	24366151	CF, 150 ohm
R168	24366562	CF, 5600 ohm
R169	24366561	CF, 560 ohm
R171	24366102	CF, 1k ohm
R172	24366394	CF, 390k ohm
R202	24366101	CF, 100 ohm
R203	24366182	CF, 1800 ohm
R204	24366152	CF, 1500 ohm
R205	24366392	CF, 3900 ohm
R208	24366101	CF, 100 ohm
R209	24366103	CF, 10k ohm
R210	24366203	CF, 20k ohm
R211	24366622	CF, 6200 ohm
R212	24366103	CF, 10k ohm
R213	24366101	CF, 100 ohm
R214	24366182	CF, 1800 ohm
R215	24366152	CF, 1500 ohm
R216	24366333	CF, 33k ohm
R217	24366101	CF, 100 ohm
R218	24366472	CF, 4700 ohm
R219	24366472	CF, 4700 ohm
R220	24366753	CF, 75k ohm
R221	24366564	CF, 560k ohm
R222	24366751	CF, 750 ohm
R223	24366103	CF, 10k ohm
R224	24366333	CF, 33k ohm
R225	24366132	CF, 1300 ohm
R226	24366104	CF, 100k ohm
R227	24366105	CF, 1M ohm
R228	24366104	CF, 100k ohm
R229	24366303	CF, 30k ohm
R230	24366102	CF, 1k ohm
R231	24366103	CF, 10k ohm
R232	24366473	CF, 47k ohm
R233	24366302	CF, 3k ohm
R234	24366102	CF, 1k ohm
R235	24366473	CF, 47k ohm
R236	24366103	CF, 10k ohm
R237	24366224	CF, 220k ohm
R241	24366101	CF, 100 ohm
R242	24366223	CF, 22k ohm
R243	24366183	CF, 18k ohm
R252	24066598	VR, 2k ohm, 1/10W
R253	24066598	VR, 2k ohm, 1/10W
R255	24066601	VR, 20k ohm, 1/10W
R301	24366131	CF, 130 ohm

Location No.	Part No.	Description
R302	24366244	CF, 240k ohm
R303	24366303	CF, 30k ohm
R304	24366102	CF, 1k ohm
R305	24366161	CF, 160 ohm
R306	24366471	CF, 470 ohm
R309	24366102	CF, 1k ohm
R311	24552242	OMF, 2400 ohm, 1/2W
R316	24552821	OMF, 820 ohm, 1/2W
R317	24383271	OMF, 270 ohm, 2W
R318	24366183	CF, 18k ohm
R319	24381302	OMF, 3k ohm, 1/2W
R321	24366163	CF, 16k ohm
R322	24366474	CF, 470k ohm
R323	24322129	OMF, 1.2 ohm, 1W
R325	24552122	OMF, 1200 ohm, 1/2W
⚠ R327	24532130	FR, 13 ohm, 1W
R329	24552472	OMF, 4700 ohm, 1/2W
R333	24366471	CF, 470 ohm
R351	24066602	VR, 50k ohm, 1/10W
R377	24366184	CF, 180k ohm
R378	24366364	CF, 360k ohm
R380	24366153	CF, 15k ohm
R402	24366273	CF, 27k ohm
R403	24366302	CF, 3k ohm
R404	24552432	OMF, 4300 ohm, 1/2W
R405	24366511	CF, 510 ohm
R407	24366161	CF, 160 ohm
R408	24366682	CF, 6800 ohm
R411	24366391	CF, 390 ohm
R412	24366121	CF, 120 ohm
⚠ R416	24007566	Cement, 2k ohm, 5W
R419	24366510	CF, 51 ohm
R420	24009951	OMF, 1k ohm, 1W
R421	24366105	CF, 1M ohm
R440	24376243	CF, 24k ohm, 1/2W
R441	24552103	OMF, 10k ohm, 1/2W
R442	24383102	OMF, 1k ohm, 2W
⚠ R444	24007768	Cement, 15 ohm, 10W
R445	24552330	OMF, 33 ohm, 1/2W
R448	24983159	MF, 1.5 ohm, 1W
R451	24066601	VR, 20k ohm, 1/10W
R452	24069547	VR, 5k ohm, 0.08W
R501	24366821	CF, 820 ohm
R502	24366334	CF, 330k ohm
R503	24366202	CF, 2k ohm
R504	24366391	CF, 390 ohm
R505	24366822	CF, 8200 ohm
R507	24366822	CF, 8200 ohm
R508	24366821	CF, 820 ohm
R509	24366203	CF, 20k ohm
R510	24366101	CF, 100 ohm
R511	24366562	CF, 5600 ohm
R512	24366152	CF, 1500 ohm
R513	24366152	CF, 1500 ohm
R515	24366221	CF, 220 ohm
R516	24366221	CF, 220 ohm
R517	24366221	CF, 220 ohm
R521	24366562	CF, 5600 ohm
R522	24360185	CF, 1.8M ohm, 1/8W
R523	24366102	CF, 1k ohm
R524	24366103	CF, 10k ohm
R525	24366103	CF, 10k ohm
R526	24366122	CF, 1200 ohm
R527	24366122	CF, 1200 ohm

Location No.	Part No.	Description
⚠ R529	24007642	Cement, 5600 ohm, 5W
R531	24366102	CF, 1k ohm
R532	24366242	CF, 2400 ohm
R533	24366132	CF, 1300 ohm
R534	24376104	CF, 100k ohm, 1/2W
R535	24366302	CF, 3k ohm
R536	24376104	CF, 100k ohm, 1/2W
R537	24366132	CF, 1300 ohm
R538	24366272	CF, 2700 ohm
R539	24366132	CF, 1300 ohm
R540	24376104	CF, 100k ohm, 1/2W
R541	24366821	CF, 820 ohm
R542	24366271	CF, 270 ohm
R543	24366512	CF, 5100 ohm
R544	24366101	CF, 100 ohm
R545	24366101	CF, 100 ohm
R547	24366471	CF, 470 ohm
R548	24366471	CF, 470 ohm
R549	24366471	CF, 470 ohm
R551	24066955	VR, 1k ohm, 1/10W
R557	24066598	VR, 2k ohm, 1/10W
R558	24066598	VR, 2k ohm, 1/10W
R559	24066598	VR, 2k ohm, 1/10W
R564	24366101	CF, 100 ohm
R565	24366101	CF, 100 ohm
R567	24366101	CF, 100 ohm
R570	24366103	CF, 10k ohm
R571	24366103	CF, 10k ohm
R572	24366103	CF, 10k ohm
R573	24366104	CF, 100k ohm
R591	24009957	OMF, 10k ohm, 2W
R592	24009957	OMF, 10k ohm, 2W
R593	24009957	OMF, 10k ohm, 2W
R601	24366681	CF, 680 ohm
R610	24366124	CF, 120k ohm
R611	24366103	CF, 10k ohm
R617	24366102	CF, 1k ohm
R618	24366103	CF, 10k ohm
R619	24366222	CF, 2200 ohm
R621	24366562	CF, 5600 ohm
R623	24366473	CF, 47k ohm
R660	24366102	CF, 1k ohm
R661	24366332	CF, 3300 ohm
R662	24552181	OMF, 180 ohm, 1/2W
R664	24366103	CF, 10k ohm
R665	24366339	CF, 3.3 ohm
R666	24366752	CF, 7500 ohm
R667	24366105	CF, 1M ohm
R668	24366152	CF, 1500 ohm
R669	24552331	OMF, 330 ohm, 1/2W
R690	24366273	CF, 27k ohm
R691	24366223	CF, 22k ohm
R692	24366104	CF, 100k ohm
R693	24366103	CF, 10k ohm
R694	24366152	CF, 1500 ohm
R695	24366222	CF, 2200 ohm
R696	24366223	CF, 22k ohm
R697	24366223	CF, 22k ohm
R698	24366472	CF, 4700 ohm
R699	24366332	CF, 3300 ohm
R801	24004914	CC, 5.6M ohm, 1/2W
⚠ R802	24007932	Cement, 6.2 ohm, 10W
R810	24377334	CF, 330k ohm, 1W
⚠ R813	24556109	FR, 1 ohm, ±10%, 1/2W

Location No.	Part No.	Description
R814	24366823	CF, 82k ohm
R815	24366221	CF, 220 ohm
R816	24367122	CF, 1200 ohm, ±2%
R817	24321398	OMF, 0.39 ohm, 1/2W
R818	24384203	OMF, 20k ohm, 3W
R819	24366689	CF, 6.8 ohm
R820	24366102	CF, 1k ohm
⚠ R821	24007778	Cement, 180 ohm, 7W
R822	24366390	CF, 39 ohm
R823	24367622	CF, 6200 ohm, ±2%
R824	24367123	CF, 12k ohm, ±2%
⚠ R825	24531620	FR, 62 ohm, 1/2W
⚠ R826	24007552	Cement, 8200 ohm, 5W
R828	24367102	CF, 1k ohm, ±2%
R829	24382473	OMF, 47k ohm, 1W
R830	24366272	CF, 2700 ohm
R831	24366103	CF, 10k ohm
R832	24383331	OMF, 330 ohm, 2W
R836	24322228	OMF, 0.22 ohm, 1W
⚠ R837	24000900	FR, 0.47 ohm, ±10%, 1W
R838	24366392	CF, 3900 ohm
R851	24066954	VR, 2k ohm, 1/10W
R890	24000630	PTC Thermistor, Dual
R901	24946272	CC, 2700 ohm, ±10%, 1/2W
R902	24946272	CC, 2700 ohm, ±10%, 1/2W
R903	24946272	CC, 2700 ohm, ±10%, 1/2W
RA01	24366102	CF, 1k ohm
RA04	24366103	CF, 10k ohm
RA05	24366101	CF, 100 ohm
RA06	24366101	CF, 100 ohm
RA07	24366101	CF, 100 ohm
RA08	24366102	CF, 1k ohm
RA09	24366103	CF, 10k ohm
RA10	24366102	CF, 1k ohm
RA11	24366472	CF, 4700 ohm
RA12	24366101	CF, 100 ohm
RA13	24366472	CF, 4700 ohm
RA14	24366102	CF, 1k ohm
RA17	24366102	CF, 1k ohm
RA19	24366103	CF, 10k ohm
RA20	24366102	CF, 1k ohm
RA22	24366103	CF, 10k ohm
RA23	24366471	CF, 470 ohm
RA24	24366102	CF, 1k ohm
RA25	24366103	CF, 10k ohm
RA27	24366392	CF, 3900 ohm
RA28	24366471	CF, 470 ohm
RA30	24366271	CF, 270 ohm
RA33	24366103	CF, 10k ohm
RA35	24366103	CF, 10k ohm
RA36	24366102	CF, 1k ohm
RA37	24366102	CF, 1k ohm
RA38	24366153	CF, 15k ohm
RA39	24366153	CF, 15k ohm
RA40	24366473	CF, 47k ohm
RA41	24366153	CF, 15k ohm
RA42	24366473	CF, 47k ohm
RA43	24366153	CF, 15k ohm
RA44	24366102	CF, 1k ohm
RA45	24366223	CF, 22k ohm
RA46	24366333	CF, 33k ohm
RA47	24366511	CF, 510 ohm
RA48	24366333	CF, 33k ohm
RA49	24366333	CF, 33k ohm

Location No.	Part No.	Description
RA60	24366333	CF, 33k ohm
RA61	24366155	CF, 1.5M ohm
RA62	24366223	CF, 22k ohm
RA64	24946226	CC, 22M ohm, ±10%, 1/2W
RA65	24366223	CF, 22k ohm
RA67	24366273	CF, 27k ohm
RA68	24366123	CF, 12k ohm
RA69	24366823	CF, 82k ohm
RA70	24366153	CF, 15k ohm
RA73	24366223	CF, 22k ohm
RA74	24366223	CF, 22k ohm
RA75	24366102	CF, 1k ohm
RA78	24366103	CF, 10k ohm
RA79	24366152	CF, 1500 ohm
RA86	24366392	CF, 3900 ohm
RA87	24366183	CF, 18k ohm
RA88	24366102	CF, 1k ohm
RA90	24366103	CF, 10k ohm
RA91	24366102	CF, 1k ohm
RA97	24383103	OMF, 10k ohm, 2W
RB01	24366333	CF, 33k ohm
RB03	24366103	CF, 10k ohm
RB04	24366103	CF, 10k ohm
RB05	24366332	CF, 3300 ohm
RB06	24366473	CF, 47k ohm
RC06	24366222	CF, 2200 ohm
RC08	24366222	CF, 2200 ohm
RF01	24366101	CF, 100 ohm
RF02	24366152	CF, 1500 ohm
RF03	24366472	CF, 4700 ohm
RF04	24366472	CF, 4700 ohm
RF05	24366223	CF, 22k ohm
RF06	24366152	CF, 1500 ohm
RF07	24366473	CF, 47k ohm
RF08	24366152	CF, 1500 ohm
RF09	24366102	CF, 1k ohm
RF10	24366152	CF, 1500 ohm
RF11	24366683	CF, 68k ohm
RF12	24366102	CF, 1k ohm
RF13	24366102	CF, 1k ohm
RF14	24366122	CF, 1200 ohm
RF15	24366102	CF, 1k ohm
RF16	24366331	CF, 330 ohm
RF17	24366102	CF, 1k ohm
RF18	24366102	CF, 1k ohm
RF19	24366105	CF, 1M ohm
RF20	24366331	CF, 330 ohm
RF21	24366223	CF, 22k ohm
RF22	24366223	CF, 22k ohm
RF23	24366223	CF, 22k ohm
RF24	24366332	CF, 3300 ohm
RF25	24366103	CF, 10k ohm
RF26	24366103	CF, 10k ohm
RF27	24366103	CF, 10k ohm
RF28	24366102	CF, 1k ohm
RF29	24366471	CF, 470 ohm
⚠ RF80	24531100	FR, 10 ohm, 1/2W
RF81	24554123	OMF, 12k ohm, 2W
⚠ RF83	24531100	FR, 10 ohm, 1/2W
RF84	24366122	CF, 1200 ohm
RH01	24366102	CF, 1k ohm
RH02	24366152	CF, 1500 ohm
RH03	24366102	CF, 1k ohm
RH04	24366102	CF, 1k ohm

Location No.	Part No.	Description
RH05	24366102	CF, 1k ohm
RH06	24366153	CF, 15k ohm
RH07	24366181	CF, 180 ohm
RH08	24366153	CF, 15k ohm
RH09	24366181	CF, 180 ohm
RH10	24366153	CF, 15k ohm
RH11	24366181	CF, 180 ohm
RH12	24366102	CF, 1k ohm
RH32	24366332	CF, 3300 ohm
RH33	24366103	CF, 10k ohm
RM03	24366182	CF, 1800 ohm
RM04	24366242	CF, 2400 ohm
RM05	24366121	CF, 120 ohm
RM06	24366241	CF, 240 ohm
RN02	24366102	CF, 1k ohm
RN08	24366103	CF, 10k ohm
RR01	24366102	CF, 1k ohm
RR06	24366471	CF, 470 ohm
RV01	24366821	CF, 820 ohm
RV02	24366132	CF, 1300 ohm
RV03	24366102	CF, 1k ohm
RV05	24366101	CF, 100 ohm
RV06	24366101	CF, 100 ohm
RV07	24366102	CF, 1k ohm
RV09	24366101	CF, 100 ohm
RV10	24366102	CF, 1k ohm
RV12	24366101	CF, 100 ohm
RV13	24366103	CF, 10k ohm
RV14	24366103	CF, 10k ohm
RV15	24366101	CF, 100 ohm
RV16	24366473	CF, 47k ohm
RV17	24366473	CF, 47k ohm
RV18	24366332	CF, 3300 ohm
RV19	24366222	CF, 2200 ohm
RV20	24366101	CF, 100 ohm
RV22	24366332	CF, 3300 ohm
RV23	24366473	CF, 47k ohm
RV24	24552750	OMF, 75 ohm, 1/2W
RV25	24366331	CF, 330 ohm
RV26	24366391	CF, 390 ohm
RV27	24366473	CF, 47k ohm
RV28	24366473	CF, 47k ohm
RV29	24366472	CF, 4700 ohm
RV30	24366102	CF, 1k ohm
RV31	24366910	CF, 91 ohm
RV32	24366820	CF, 82 ohm
RV33	24366332	CF, 3300 ohm
RV34	24366473	CF, 47k ohm
RV36	24366104	CF, 100k ohm
RV37	24366473	CF, 47k ohm
RV39	24366910	CF, 91 ohm
RV40	24366560	CF, 56 ohm
RV41	24366103	CF, 10k ohm
RV42	24366750	CF, 75 ohm
RV43	24366510	CF, 51 ohm
RV44	24366510	CF, 51 ohm
RV45	24366510	CF, 51 ohm
RV46	24366101	CF, 100 ohm
RV47	24366104	CF, 100k ohm
RV48	24366102	CF, 1k ohm
RV49	24366102	CF, 1k ohm
RV60	24366220	CF, 22 ohm
RV61	24366220	CF, 22 ohm
RV62	24366220	CF, 22 ohm

Location No.	Part No.	Description
RV63	24366562	CF, 5600 ohm
RV64	24366562	CF, 5600 ohm
RV65	24366104	CF, 100k ohm
RV66	24366562	CF, 5600 ohm
RV67	24366562	CF, 5600 ohm
RV68	24366471	CF, 470 ohm
RV69	24366223	CF, 22k ohm
RV70	24366273	CF, 27k ohm
RV71	24366102	CF, 1k ohm
RV72	24366103	CF, 10k ohm
RV73	24366560	CF, 56 ohm
RX02	24366102	CF, 1k ohm
RX05	24366101	CF, 100 ohm
RX08	24366101	CF, 100 ohm
RX10	24366101	CF, 100 ohm
RX13	24366102	CF, 1k ohm

COILS & TRANSFORMERS

L102	23262819	Coil, PIF, TRF1071D
L103	23237987	Coil, Peaking, TRF4100AC
L105	23237993	Coil, Peaking, TRF4339AC
L107	23237987	Coil, Peaking, TRF4100AC
L108	23237987	Coil, Peaking, TRF4100AC
L151	23262813	Coil, IF, TRF1077D
L152	23262813	Coil, IF, TRF1077D
L162	23262951	Coil, RF Choke, TRF1019
L201	23237974	Coil, Peaking, TRF4121AC
L311	23261974	Coil, Choke, HC5-035
L315	23289100	Coil, Peaking, TRF4100AF
L405	23221739	Coil, Choke, TRF9252D
L406	23103859	Coil (Ferrite Bead), TEM2011
L411	23233065	Coil, Linearity, TLN2111
L441	23238934	Coil, Peaking, TRF4109AC
⚠ L462	23227339	Deflection Yoke, 4700-02
L503	23237987	Coil, Peaking, TRF4100AC
L551	23250972	Coil, 1H-Delay Matching, TRF5418D
L590	23289221	Coil, Peaking, TRF4221AF
L601	23237986	Coil, Peaking, TRF4120AC
L651	23232946	Coil, Variable, TRF3073D
L801	23221050	Coil, RF Choke, TLN1015
L802	23103859	Coil (Ferrite Bead), TEM2011
L803	23261975	Coil, Choke, TRF9229
L804	23261975	Coil, Choke, TRF9229
L805	23222694	Coil, Width, TLN2026
L806	23103859	Coil (Ferrite Bead), TEM2011
L807	23222694	Coil, Width, TLN2026
⚠ L901	23200779	Coil, Degaussing, TSB-2231
LA01	23238934	Coil, Peaking, TRF4109AC
LA02	23221803	Coil, Choke, TLN3040D
LB01	23262778	Coil, IF, TRF1112
LF01	23238934	Coil, Peaking, TRF4109AC
LF02	23238920	Coil, Peaking, TRF4150AC
LF03	23238934	Coil, Peaking, TRF4109AC
LM01	23262797	Coil, IF, TRF1093D
LM02	23250865	Coil, IF, TRF5414DA
LM03	23250865	Coil, IF, TRF5414DA
LM04	23262798	Coil, IF, TRF1092D
LN02	23237985	Coil, Peaking, TRF4150AC
⚠ T401	23224983	Transformer, Horiz. Drive, TLN1039
⚠ T461	23236245	Transformer, Flyback, AT2078/21
T801	23211858	Line Filter, TRF3139

Location No.	Part No.	Description
T803	23217074	Transformer, Converter, 47003593
TN01	23232880	Coil, Variable, TRF3505D
TN02	23262843	Coil, PIF Trap, TRF1457D
SEMICONDUCTORS		
IC101	23318201	IC, T51496P
IC303	23119548	IC, AN5515
IC408	23318218	IC, μPC7812H
IC501	B0379475	IC, TA8659AN
IC660	23318392	IC, AN5262
IC661	23119668	IC, TDA2611A
IC801	23318232	IC, TDA4601
IC807	23318299	IC, L78MR05-FA
ICA01	23319011	IC, M34300-584SP
ICA04	23119441	IC, LA7910
ICF01	23318097	IC, SAA5231
ICF02	23318383	IC, SAA5243P/E
ICF04	23319014	IC, MC68HC05C8B
ICH01	23119139	IC, AN5862K
ICV01	B0383505	IC, TA8720AN
Q102	A6708871	Transistor, 2SC388ATM
Q103	23114691	Transistor, BC557A
Q104	23114689	Transistor, BC547A
Q161	A6708871	Transistor, 2SC388ATM
Q201	23114689	Transistor, BC547A
Q202	23114691	Transistor, BC557A
Q203	23114689	Transistor, BC547A
Q204	A6041876	Transistor, 2SK117-GR FA-2
Q205	A6342200	Transistor, 2SC2878-A
Q206	23114689	Transistor, BC547A
Q303B	23035308	Screw, BTB3X8SZN
Q363	23114689	Transistor, BC547A
Q402	A6330069	Transistor, 2SC2482 FA-1
⚠ Q404	23314375	Transistor, ON4409
Q502	23114691	Transistor, BC557A
Q503	23114691	Transistor, BC557A
Q505	23114693	Transistor, BF871
Q506	23114689	Transistor, BC547A
Q507	23114693	Transistor, BF871
Q508	23114689	Transistor, BC547A
Q509	23114693	Transistor, BF871
Q510	23114689	Transistor, BC547A
Q514	23114688	Transistor, BC327
Q516	23114689	Transistor, BC547A
Q605	23114689	Transistor, BC547A
Q697	23114689	Transistor, BC547A
Q698	A6342200	Transistor, 2SC2878-A
Q699	23114691	Transistor, BC557A
Q802	23314376	Transistor, ON4409
Q803	23314246	Transistor, 2SC2023 LF-4
Q804	A6547303	Transistor, 2SA1321
Q805	A6325067	Transistor, 2SC2230A-Y
Q806	23114546	Transistor, BC557B
QA05	23114689	Transistor, BC547A
QA06	23114689	Transistor, BC547A
QA07	23114689	Transistor, BC547A
QA09	23114691	Transistor, BC557A
QA10	23114689	Transistor, BC547A
QA11	23114546	Transistor, BC557B
QB01	23114689	Transistor, BC547A
QB02	23114689	Transistor, BC547A
QF03	23319001	Transistor, IMS1630LP12
QF06	23114689	Transistor, BC547A

Location No.	Part No.	Description
QF07	23114689	Transistor, BC547A
QF08	A6734590	Transistor, 2SC752(G)TM-Y
QF09	A6734590	Transistor, 2SC752(G)TM-Y
QF10	A6734590	Transistor, 2SC752(G)TM-Y
QF80	23314374	Transistor, BD945
QF81	23314374	Transistor, BD945
QH03	23114689	Transistor, BC547A
QH04	23114689	Transistor, BC547A
QH05	23114689	Transistor, BC547A
QV02	23114691	Transistor, BC557A
QV03	23114689	Transistor, BC547A
QV05	23114689	Transistor, BC547A
QV06	23114689	Transistor, BC547A
QV07	23114689	Transistor, BC547A
QV09	23114632	Transistor, BC547B
QV10	23114689	Transistor, BC547A
QV11	A6342200	Transistor, 2SC2878-A
D201	23115599	Diode, 1N4148
D202	23115599	Diode, 1N4148
D241	A7150041	Diode, 1SS104
D302	23118479	Diode, BYD33J
D305	23118479	Diode, BYD33J
D314	A7117205	Diode, Zener, 04AZ12X
D315	A7116715	Diode, Zener, 04AZ7.5Y
D367	23115599	Diode, 1N4148
D401	A7116925	Diode, Zener, 04AZ9.1Z
D402	A7117715	Diode, Zener, 04AZ20Y
D403	A7117215	Diode, Zener, 04AZ12Y
D406	23118479	Diode, BYD33J
D408	23118052	Diode, RU4Z
D410	A7116815	Diode, Zener, 04AZ8.2Y
D593	23115599	Diode, 1N4148
D594	23115599	Diode, 1N4148
D595	23115599	Diode, 1N4148
D660	23115599	Diode, 1N4148
D695	23115599	Diode, 1N4148
D696	23115599	Diode, 1N4148
D697	23115599	Diode, 1N4148
D698	23115599	Diode, 1N4148
D699	23115599	Diode, 1N4148
D803	23118173	Diode, RBV-406M-LFA
D805	23118479	Diode, BYD33J
D806	23118479	Diode, BYD33J
D807	23118479	Diode, BYD33J
D808	23118736	Diode, BYV96E
D809	23118451	Diode, RU4A
D810	23118479	Diode, BYD33J
D811	23118479	Diode, BYD33J
D812	A7116515	Diode, Zener, 04AZ6.2Y
D813	23118479	Diode, BYD33J
DA13	23115599	Diode, 1N4148
DA14	23115599	Diode, 1N4148
DA15	23115599	Diode, 1N4148
DA16	23115599	Diode, 1N4148
DA17	23115599	Diode, 1N4148
DA20	23115599	Diode, 1N4148
DA21	23115599	Diode, 1N4148
DA22	23115599	Diode, 1N4148
DA27	23115599	Diode, 1N4148
DA28	23115599	Diode, 1N4148
DA30	23115878	Diode, Zener, μPC574J(L)
DA31	23115599	Diode, 1N4148
DA33	23115599	Diode, 1N4148
DA34	23115599	Diode, 1N4148

Location No.	Part No.	Description
DE40	23118969	Diode (LED), MV57124, Red
DE41	23318436	Diode (LED), MV53124A, Yellow
DF01	23115599	Diode, 1N4148
DF02	23115599	Diode, 1N4148
DF03	23115599	Diode, 1N4148
DF80	A7117305	Diode, Zener, 04AZ13X
DF81	A7116415	Diode, Zener, 04AZ5.6Y
DH01	23115599	Diode, 1N4148
DH02	23115599	Diode, 1N4148
DH03	23115599	Diode, 1N4148
DH04	23115599	Diode, 1N4148
DH05	23115599	Diode, 1N4148
DH06	23115599	Diode, 1N4148
DH07	A7116215	Diode, Zener, 04AZ4.7Y
DH08	23115599	Diode, 1N4148
DH11	23115599	Diode, 1N4148
DH12	23115599	Diode, 1N4148
DV01	A7116915	Diode, Zener, 04AZ9.1Y
DV02	23115599	Diode, 1N4148
DV03	A7116215	Diode, Zener, 04AZ4.7Y

MISCELLANEOUS

B101	23406189	Shield Plate (Tuner)
B204	23848140	Holder
B501	23406188	Shield Plate (Chroma)
BF01	23406185	Shield Case (Text)
BF02	23406186	Shield Cover (Text)
BF03	23406187	Shield Plate (Text)
⚠ F801	23144896	Fuse, 2.0A
F801A	23165102	Fuse Holder
K901	23120370	Remote Sensor, IR-9107-K
K902B	23994979	Text Label
P661	23365430	Earphone Jack
⚠ P801	23176704	Power Cord
PF01	23367684	Plug, 11P
PF02	23367677	Plug, 4P
PH01	23365598	21 Pin Connector
PH02	23365598	21 Pin Connector
PV01	23365515	Jack, 4P
PV02	23365428	Jack Phono, 2P
S202	23145542	Switch, Lever, 1C3P
S301	23145682	Switch, Lever, 1C3P
⚠ S801	23145434	Switch, Power, 2C2P
SA01	23145430	Switch, Push, 1C1P
SA02	23145430	Switch, Push, 1C1P
SA03	23145430	Switch, Push, 1C1P
SA04	23145430	Switch, Push, 1C1P
⚠ V901A	23902353	Socket, CRT, 10P
W201	23250878	Delay Line, TRF2083
W661	23151199	Speaker, SPK-1267, 60x70mm, 8 ohm
X401	23153886	Ceramic Resonator, 503kHz, TCR1012
X501	23153979	Crystal, 4.43MHz
X502	23250950	Coil, 1H-Delay Line, DL711
XF01	23153657	Crystal, 13.875MHz
XF02	23153924	Crystal, 6.0MHz
XF03	23153741	Ceramic Resonator, TCR1029
Z101	A5611192	PIF SAW Filter, F1037C
Z102	23107915	Ceramic Video Trap, 5.5 to 5.7MHz, TCF1017
Z103	23107913	Ceramic Video Trap, 6.5MHz, TCF1018
Z601	23107947	Ceramic Filter, 5.5MHz, SFE5.5MBF
Z668	23107742	Filter, 3MHz, TEM1014
Z669	23107742	Filter, 3MHz, TEM1014
ZA01	23153741	Ceramic Resonator, TCR1029
ZA02	24000788	Resistor Block, 4700 ohmx4, 1/8W
ZA03	24094651	Capacitor Block, 100pFx4, 50V
ZV01	23107849	Ceramic Video Trap, 4.43MHz, TCF1032
ZV02	23107744	Filter, 3MHz, TEM1012
ZV03	23107744	Filter, 3MHz, TEM1012
ZV04	23107742	Filter, 3MHz, TEM1014
ZV05	23107744	Filter, 3MHz, TEM1012
ZV07	23107742	Filter, 3MHz, TEM1014

PC BOARD ASSEMBLIES

U101A	23336933	PIF Board, PB0162-1
U101B	23336934	Text Board, PB0162-2
U101C	23336935	A/V Board, PB0162-3
U101D	23336936	Headphone Board, PB0162-4
U902A	23336561	Main Board, PB0043
U903A	23336704	CRT Drive Board, PB0044-1
U903B	23336705	Power Board, PB0044-2

PICTURE TUBE

⚠ V901	23312144	Picture Tube, A51EBV12X, SVC

TUNER

H001	23121561	Tuner, VHF/UHF, EG438

REMOTE HAND SET PARTS

K902	23120348	Remote Hand Unit, CT-9463
AT01	23304498	Upper Case
AT02	23309866	Lower Case
AT03	23309867	Battery Cover
AT04	23309868	Filter
ST01	23304499	Rubber Sheet
UT01	23336489	PC Board, PB0521
ZT01	23153736	Ceramic Resonator, CSB455EB20

THIS PAGE IS
INTENTIONALLY LEFT
BLANK

MAIN BOARD PB0043

BOTTOM (FOIL) SIDE

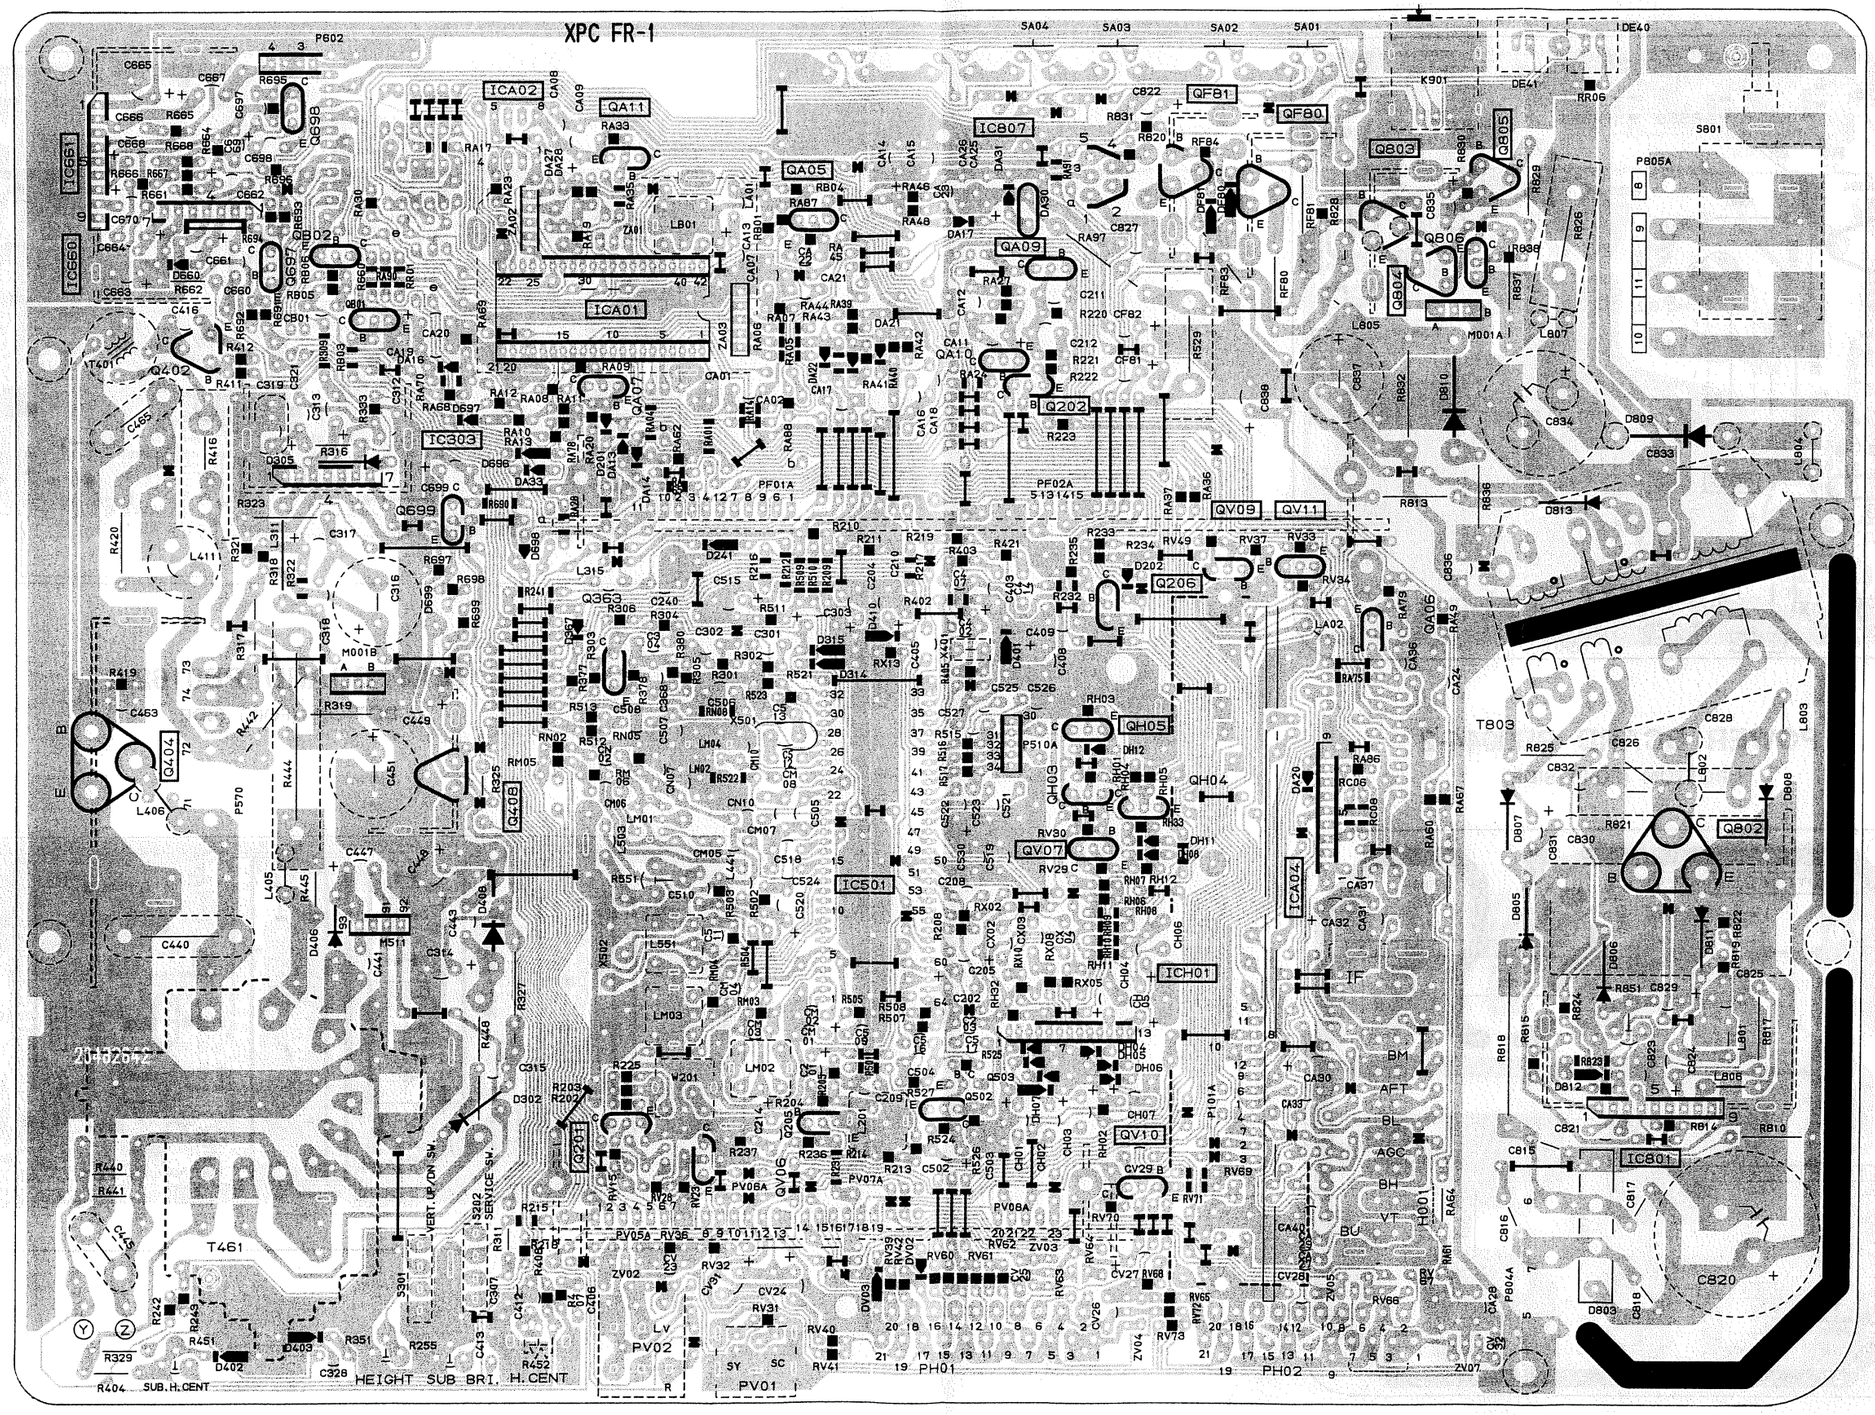

CRT DRIVE BOARD PB0044-1

BOTTOM (FOIL) SIDE

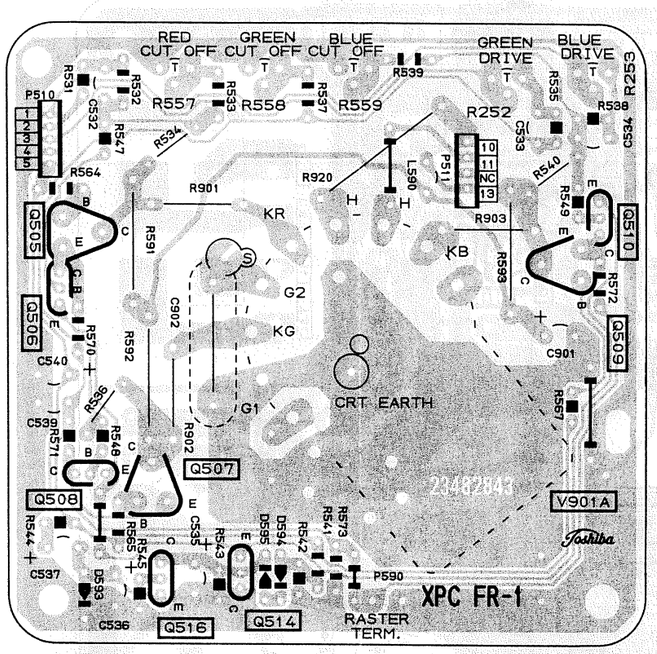

POWER BOARD PB0044-2

BOTTOM (FOIL) SIDE

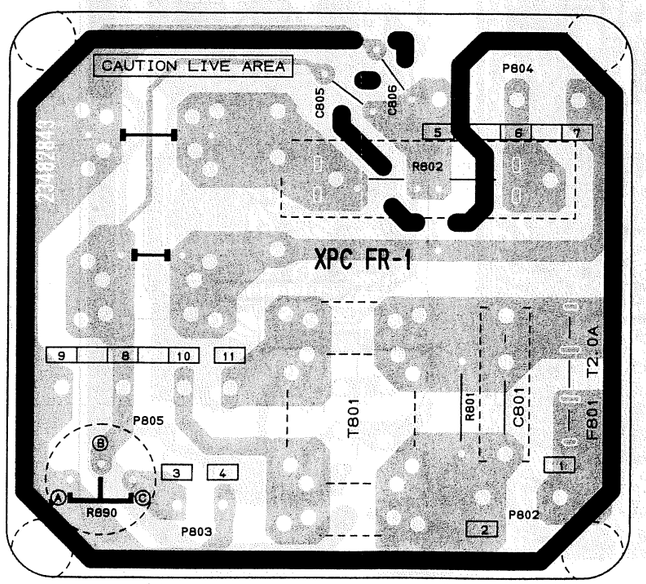

PIF BOARD PB0162-1

BOTTOM (FOIL) SIDE

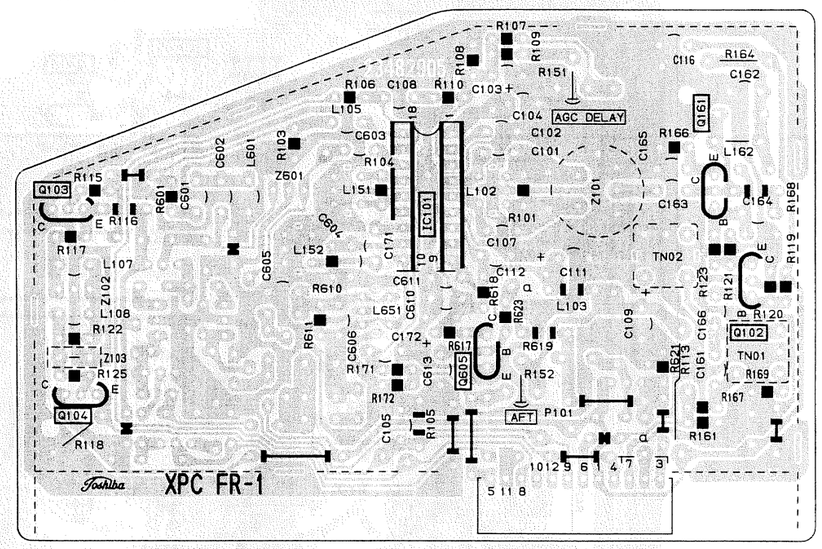

TEXT BOARD PB0162-2

BOTTOM (FOIL) SIDE

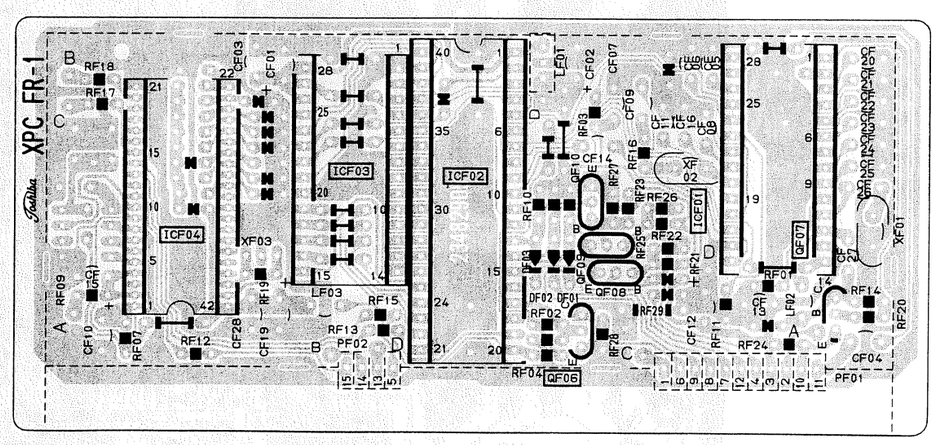

A/V SW BOARD PB0162-3

BOTTOM (FOIL) SIDE

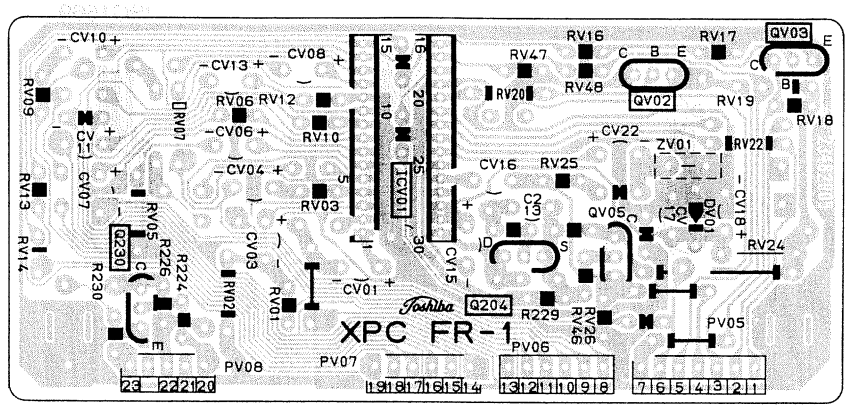

H/P BOARD PB0162-4

BOTTOM (FOIL) SIDE

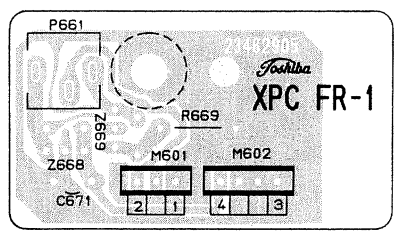

TERMINAL VIEW OF TRANSISTORS

① BC327
BC337
BC547A
BC547B
BC547C
BC557A
BC557B
BC556A



② 2SK30ATM
2SK117



③ BD202



④ BF871
2SD553
2SC1569



⑤ 2SC3678
2SC3182N

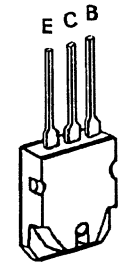

⑥ 2SD1427
2SD1432



⑦ 2SC2482
2SA1321
2SC2230
2SA1020
2SC2655
2SC752GTM



⑧ 2SC388ATM
2SA1015
2SC1959
2SA562TM



⑨ 2SD1548

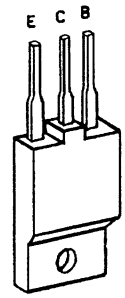

⑩ 2SC2023



⑪ ON4409



P BOARD
B0162-4

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
AUDIO OUT(R)	AUDIO IN(R)	AUDIO OUT(L)	AUDIO EARTH	EARTH	AUDIO IN(L)	BLUE IN	EXT/TV	GREEN EARTH	NC	GREEN IN	NC	RED EARTH	NC	RED IN	RAPID BLANKING	VIDEO EARTH	RAPID BLK EARTH	VIDEO OUT	VIDEO IN	SHIELD EARTH

U902 MAIN BOARD PB0043

U903A CRT DRIVE BOARD PB0044-1

U101C AV SW. BOARD PB0162-3

PIN / MODE	IV01 I5	IV01 I6
TV	H	H
VIDEO1	H	L
VIDEO2	L	L
VIDEO-75	L	H

21	SHIELD EARTH
20	VIDEO IN
19	VIDEO OUT
18	RAPID BLK EARTH
17	VIDEO EARTH
16	RAPID BLANKING
15	RED IN
14	NC
13	RED EARTH
12	NC
11	GREEN IN
10	NC
9	GREEN EARTH
8	EXT/TV
7	BLUE IN
6	AUDIO IN(L)
5	EARTH
4	AUDIO EARTH
3	AUDIO OUT(L)
2	AUDIO IN(R)
1	AUDIO OUT(R)

U101C AV SW. BOARD PB0162-3

U101D H/P BOARD PB0162-4

U101A P.I.F/S.I.F BOARD PB0162-1

PIN / MODE	DV01 15	DV01 16
TV	H	H
VIDEO1	H	L
VIDEO2	L	L
VIDEO-75	L	H

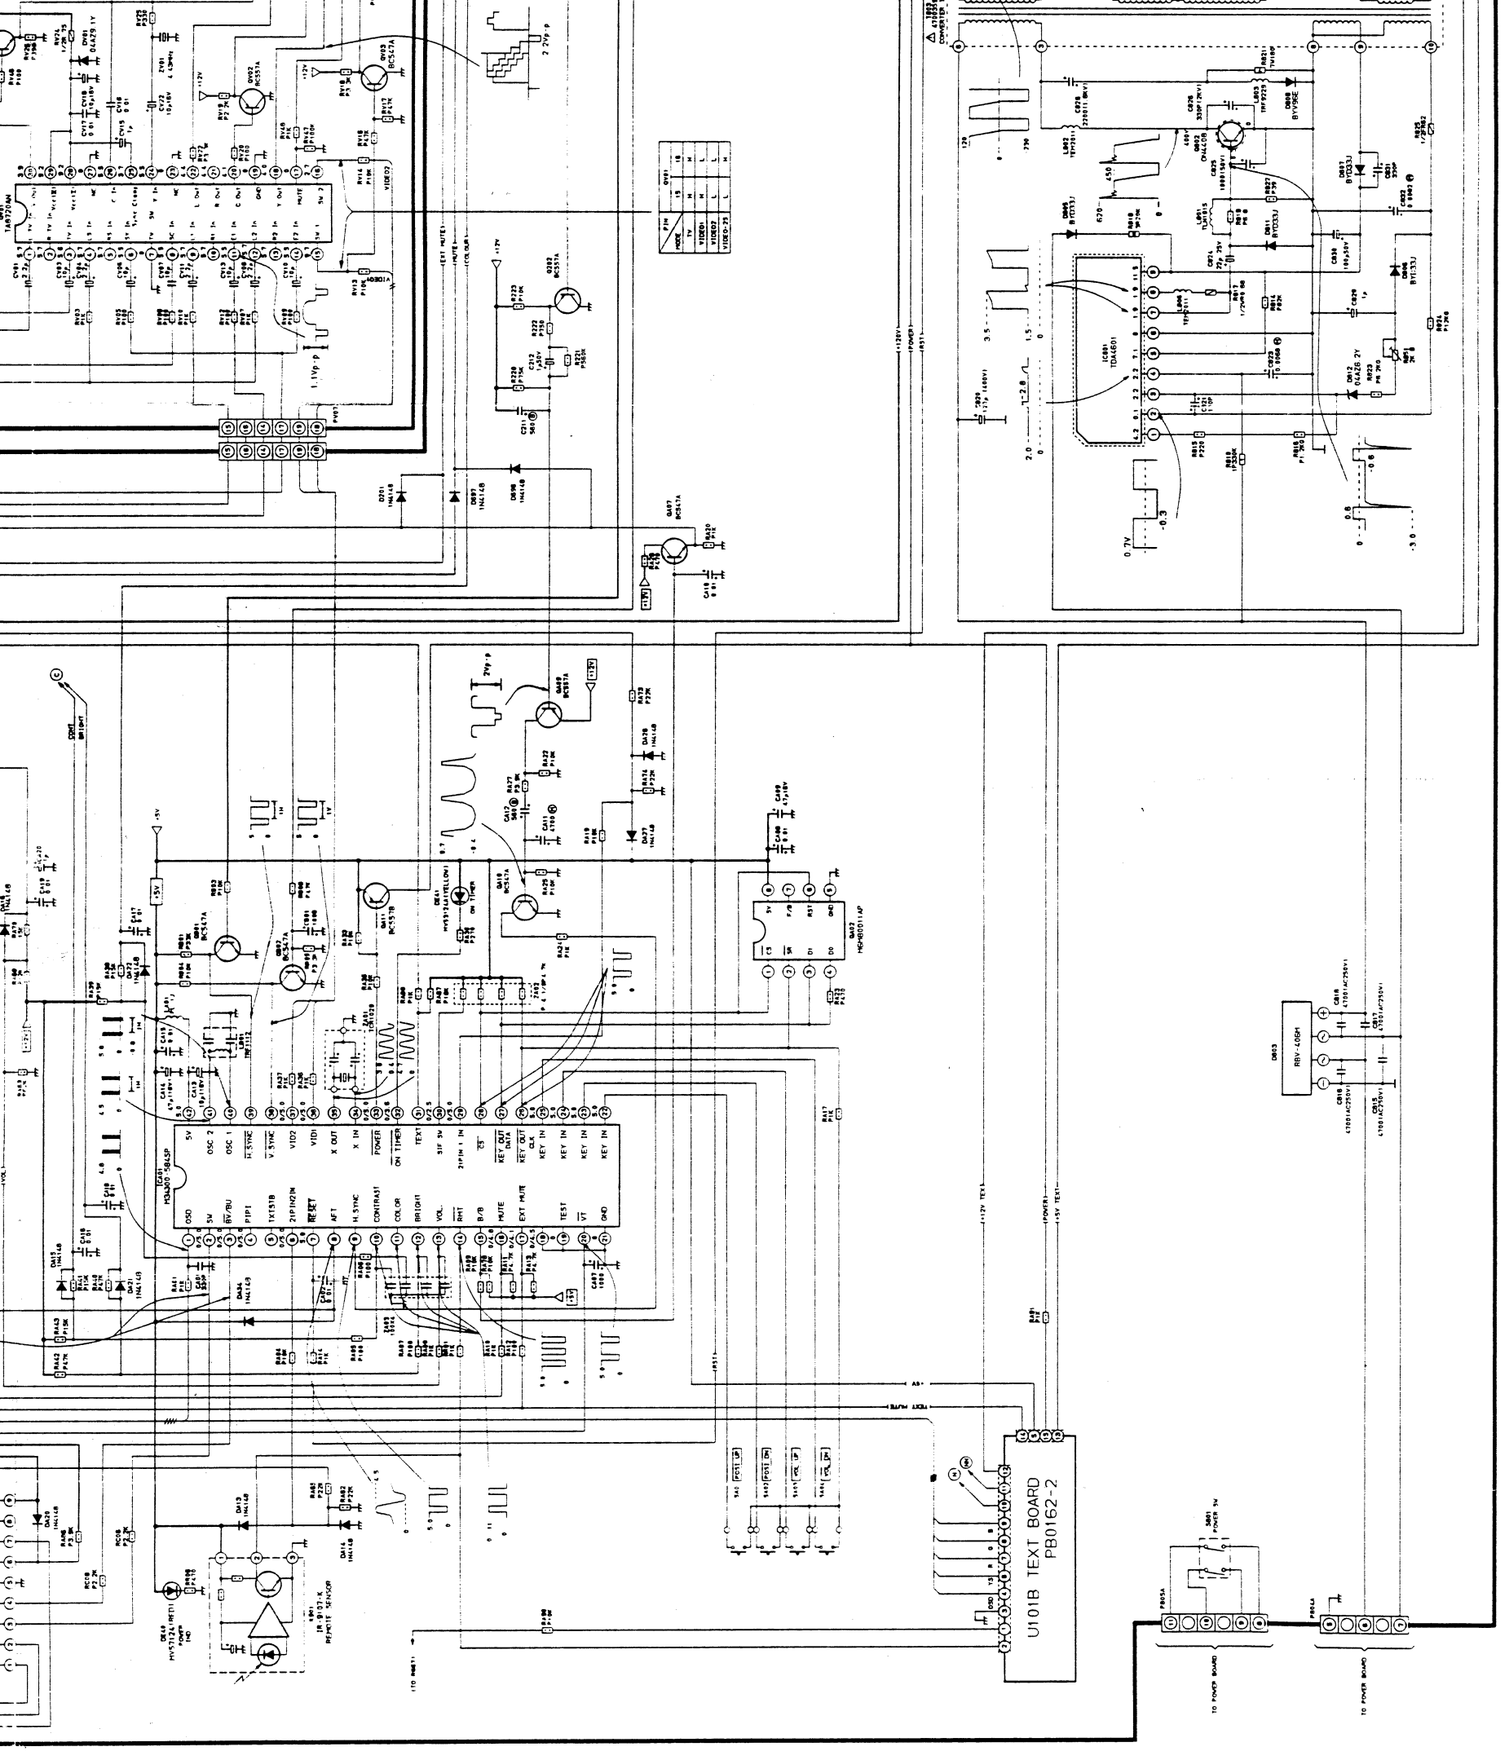
U101B TEXT BOARD
PB0162-2
TO POWER BOARD
TO POWER BOARD

U101B TEXT BOARD PB0162-2

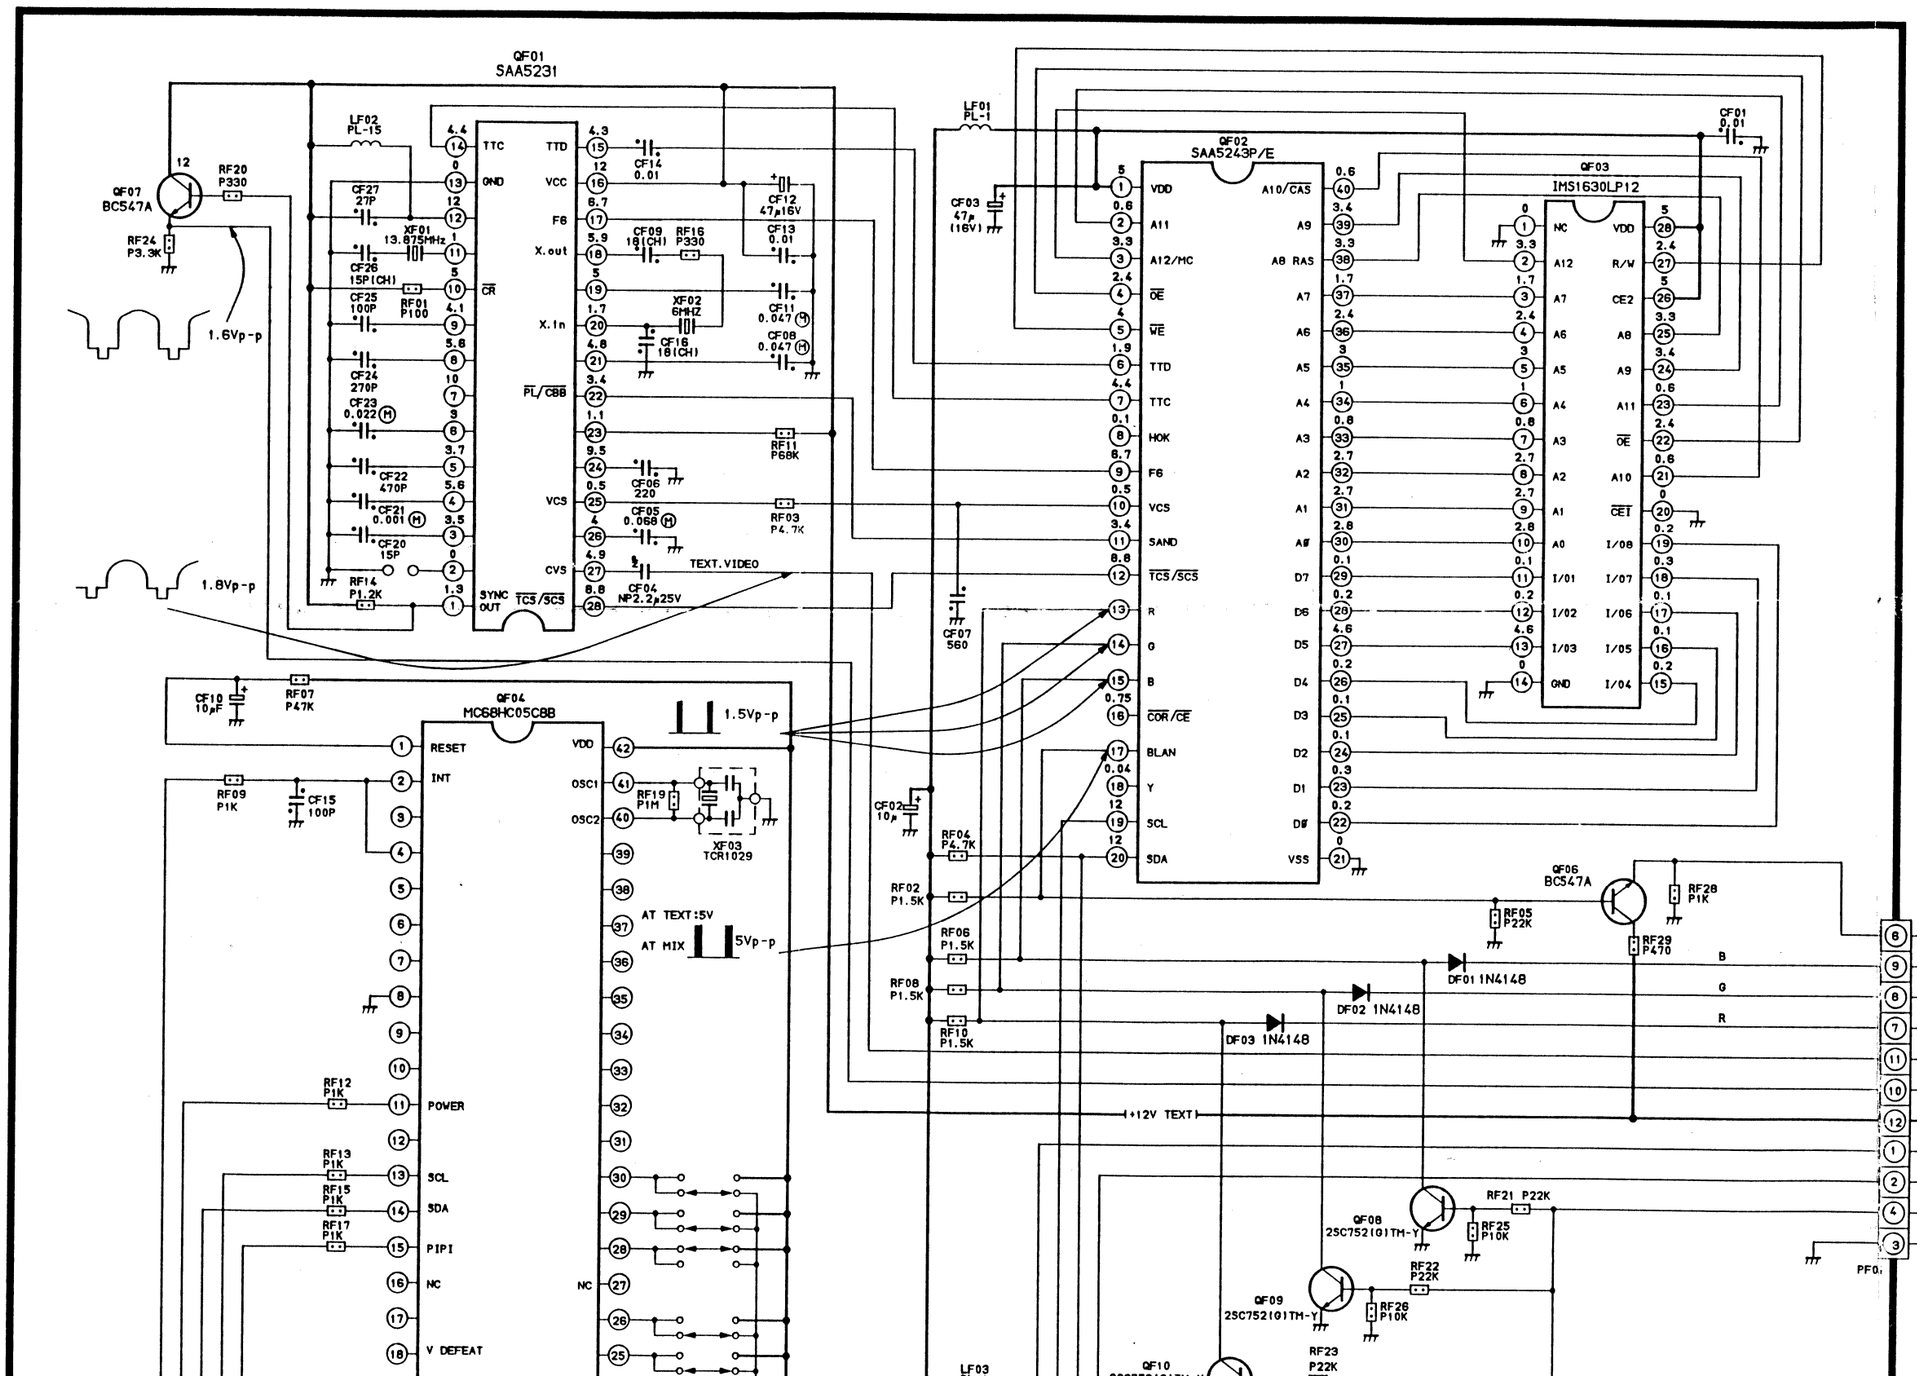

U903B POWER BOARD PB0044-2

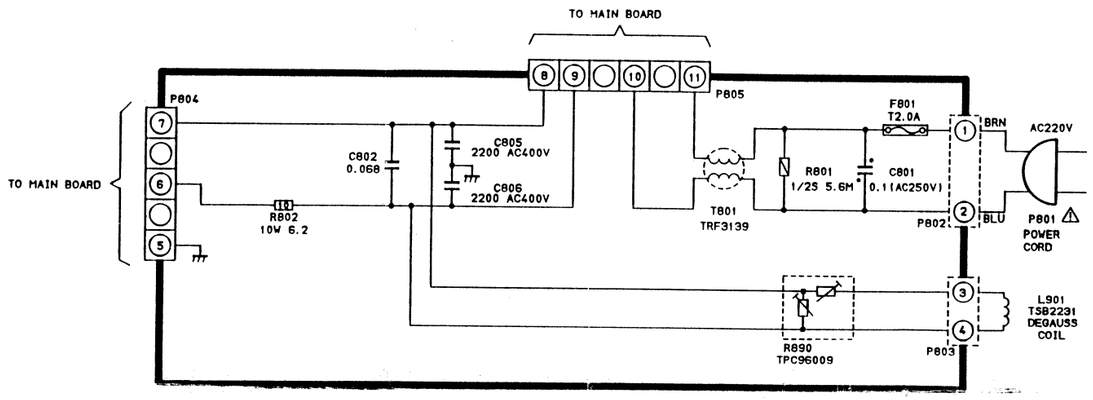

U101A PIF/SIF BOARD PB0162-1

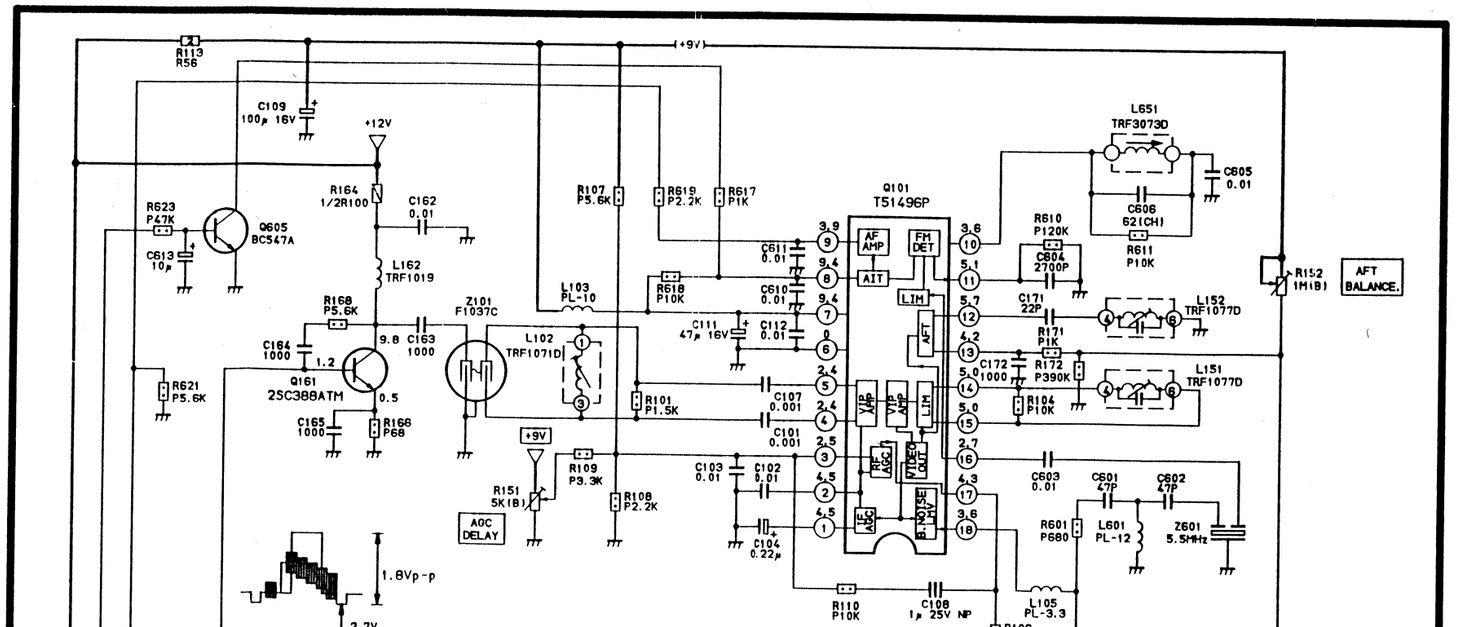

U101B TEXT BOARD PB0162-2

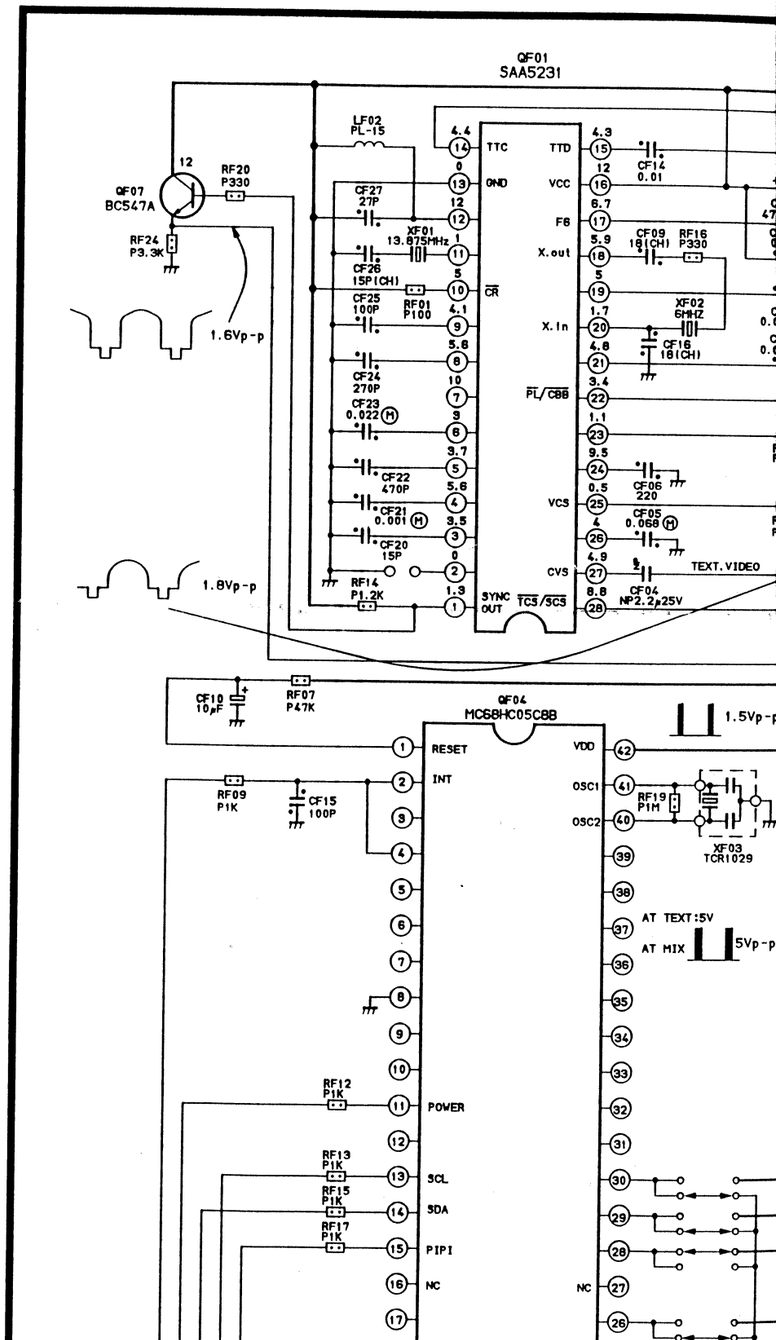

U101A PIF/SIF BOARD PB0162-1

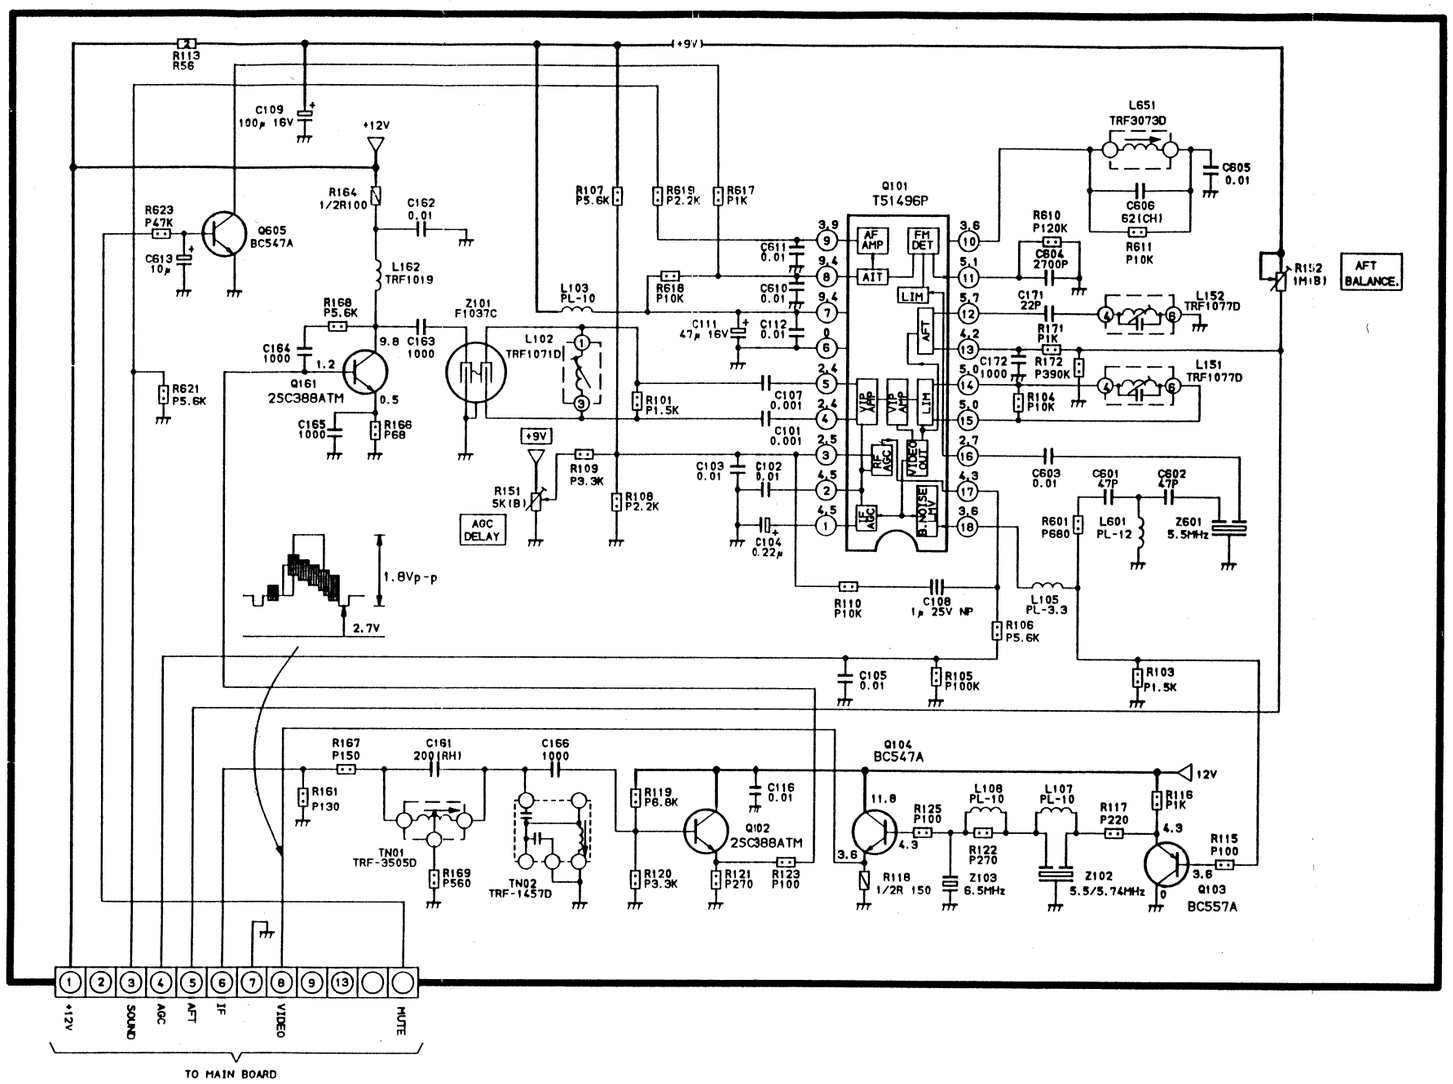

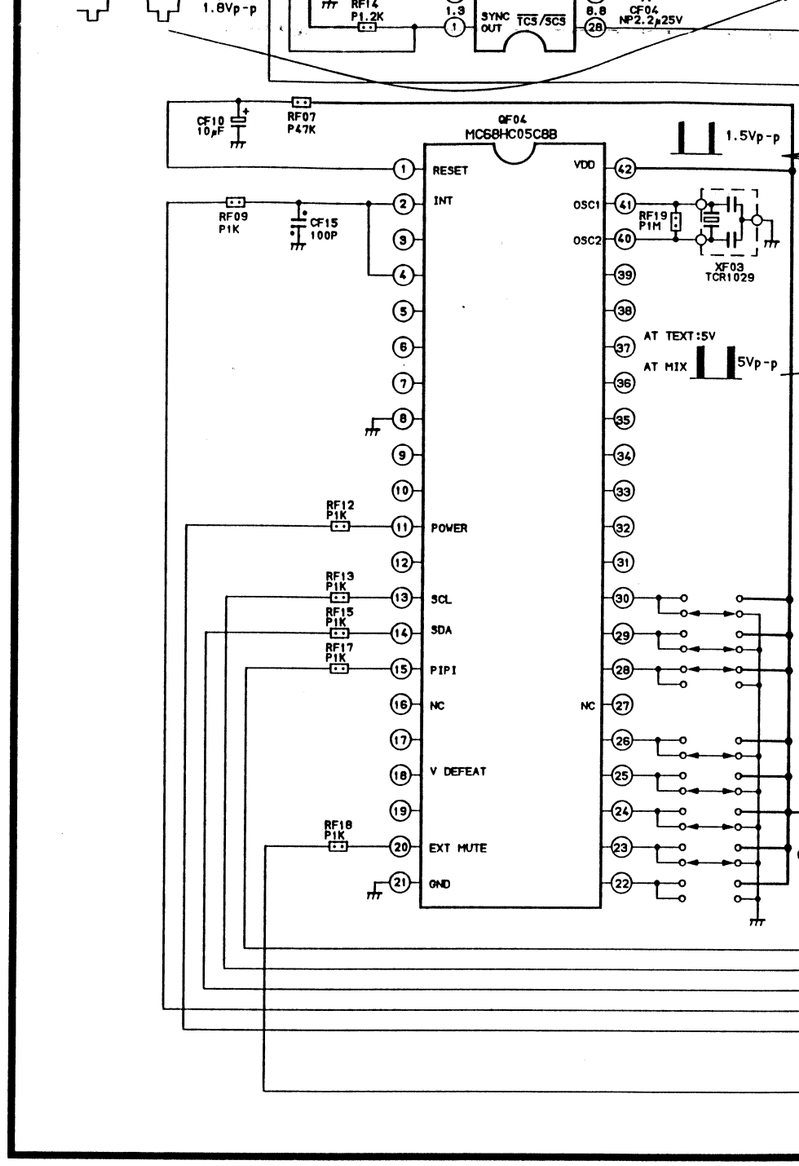

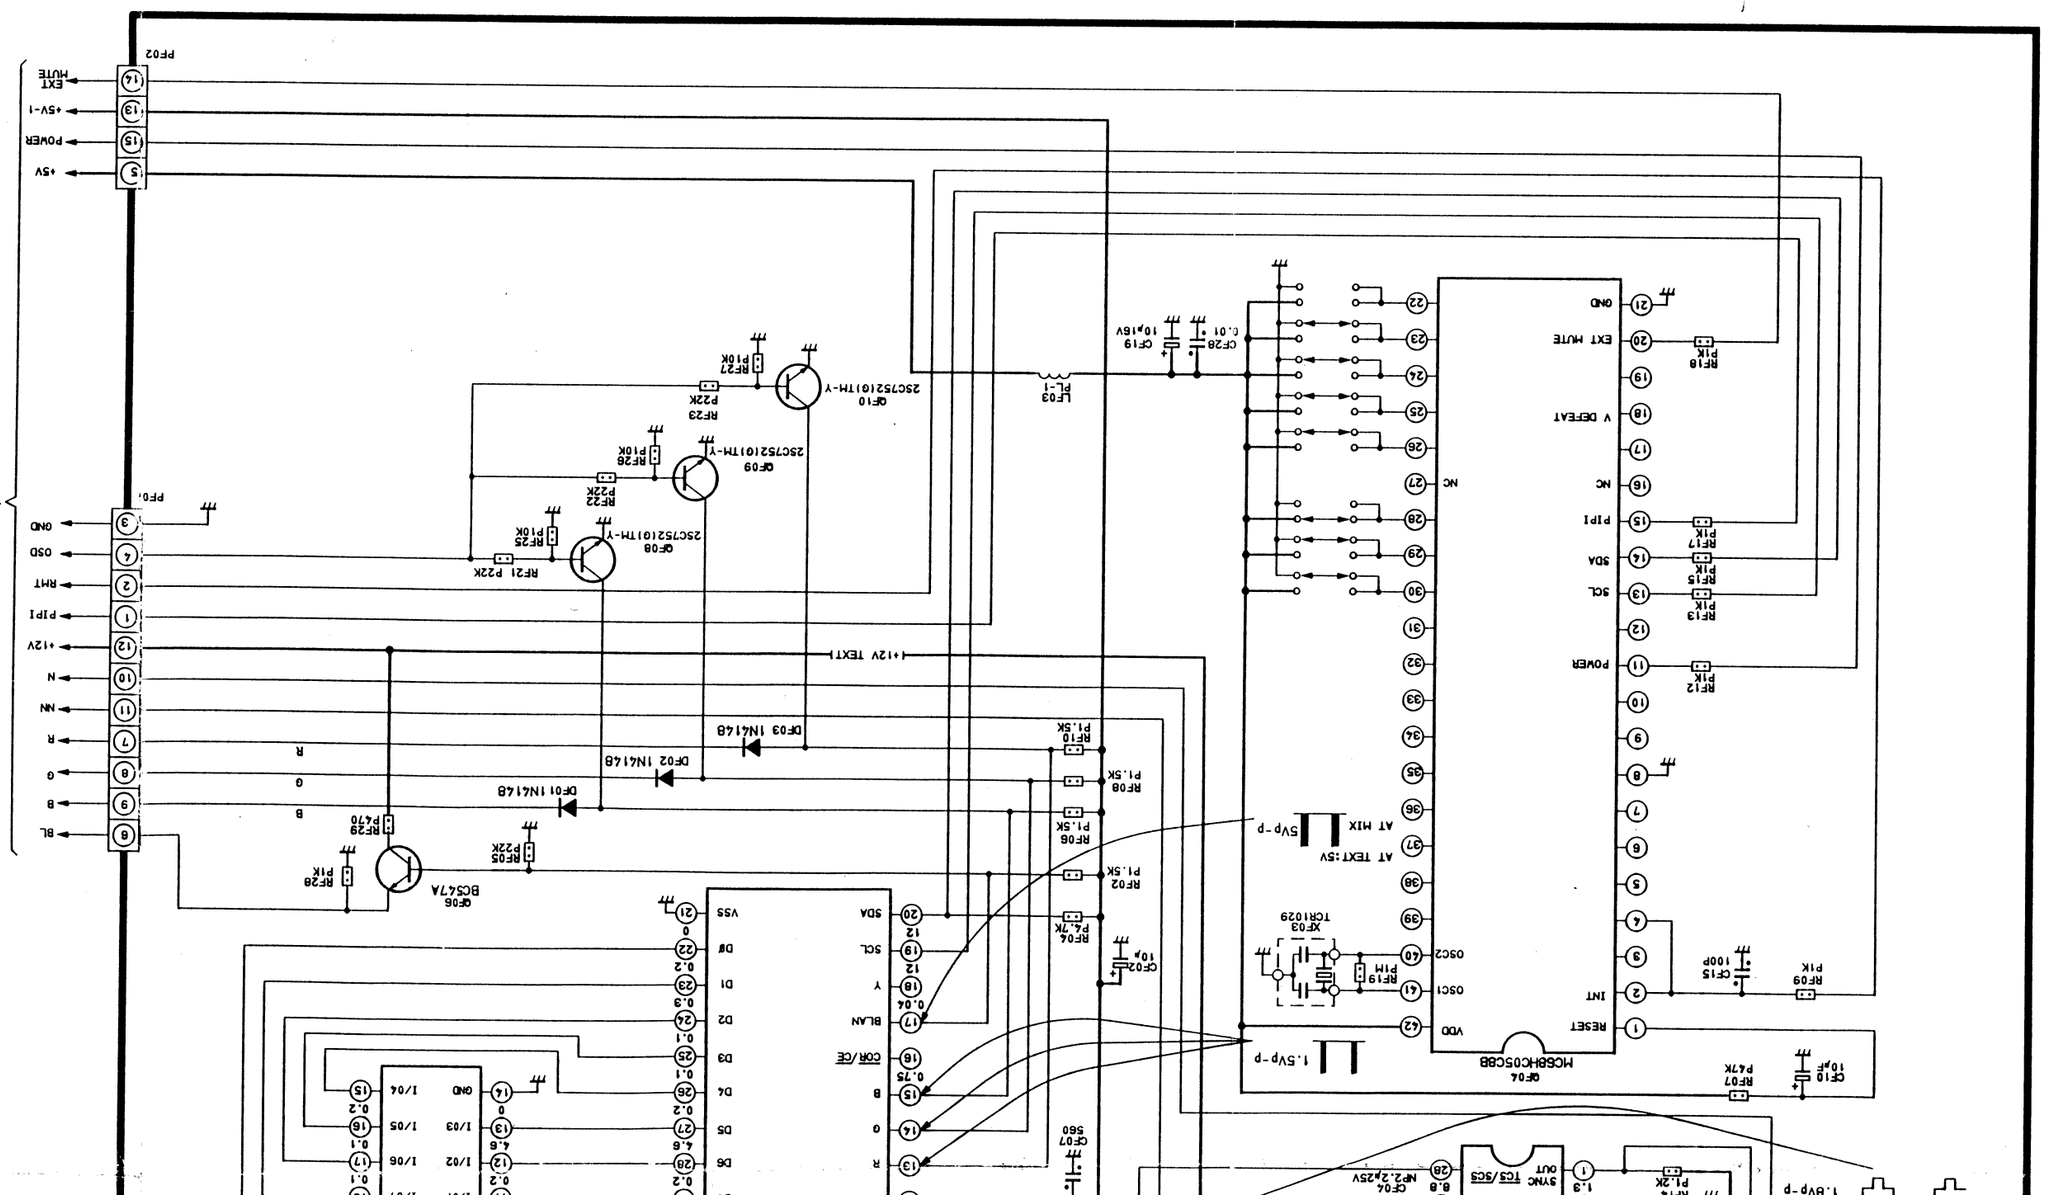
TO MAIN BOARD
PF01
PF02
GND
OSD
RMT
PIPI
+12V
N
NN
R
G
B
BL
+5V
POWER
+5V-1
EXT MUTE
+12V (EXT)
DF01 1N4148
DF02 1N4148
DF03 1N4148
QF05 BC547A
QF06 MC68HC05C8B
QF08 2SC1521(G)TM-Y
QF09 2SC1521(G)TM-Y
QF10 2SC1521(G)TM-Y
LF03 PL-1
CF28 0.01
CF19 10μ/16V
RF01 P1K
RF02 P1.5K
RF03 P1.5K
RF04 P4.7K
RF05 P22K
RF06 P1.5K
RF07 P4.7K
RF08 P1.5K
RF09 P1K
RF10 P1.5K
RF12 P1K
RF13 P1K
RF14 P1K
RF15 P1K
RF16 P1K
RF17 P1K
RF18 P1K
RF19 P1M
RF21 P22K
RF22 P22K
RF23 P22K
RF25 P10K
RF26 P10K
RF27 P10K
RF28 P1K
RF29 P470
CF02 10μ
CF07 560
CF10 10μF
CF15 100P
XF03 TCR1029
AT MIX 5Vp-p
AT TEXT:5V 5Vp-p
1.5Vp-p
1.8Vp-p
VSS
VDD
RESET
INT
OSC1
OSC2
SDA
SCL
Y
BLAN
CCR/CE
B
G
R
D0
D1
D2
D3
D4
D5
D6
D7
I/O1
I/O2
I/O3
I/O4
I/O5
I/O6
I/O7
I/O8
V DEFEAT
NC
PIPI
SYNC TCG/SCG
NPC 2.2/25V
P1.2K
AFT BALANCE
R152 1M(B)
CF01 0.05